



KORKEATEHOLINKOAVA PESUKONE ESTERI P5, P5/AV

KÄYTTÖOHJE

Ennen koneen käyttämistä tarkista, että koneeseen on kytketty virta huoltokytkimestä sekä etupaneelin virtakytkimestä  Tarkista myös, että koneen vesihanat ovat auki.

1. Avaa täyttöluukku

Luukun saa auki painamalla luukun avausnappia , luukku avautuu 3 sekunnin kuluttua. Kun luukku on auki, näytössä näkyy avaimen kuva.

2. Täytä kone

Lajittele vaatteet kangasmateriaalin ja pesuohjelman mukaan. Muista tyhjentää taskut.


 
 
Koneen suurin täyttömäärä on 5 kg/täyttö.

Älä ylitäytä konetta! **Mattojen pesu koneella on ehdottomasti kielletty!**

3. Sulje täyttöluukku

Luukku sulkeutuu painamalla se kiinni. Luukun avainmerkki syttyy näyttöön, kun luukku on kunnolla kiinni. Älä paisko luukkua.

 
4. Valitse pesuohjelma

Paina ohjelmanäppäintä    valitaksesi haluamasi ohjelman.

Ohj. No:	Ohjelmakuvaus	Täyttömäärä enintään
1	Tehopesu 90°C esipesulla	5,0 kg
2	Normaalipesu 60°C	5,0 kg
3	Kevytpesu 60°C	5,0 kg
4	Normaalipesu 40°C	5,0 kg
5	Siliävät/synteett. 40°C	2,5 kg
6	Superpikapesu 40°C	2,5 kg
7	Villa / käsinpesu 30°C	1,7 kg
8	Linkousohjelma	5,0 kg

5. Annostele pesu- ja huuhteluaineet

Vedä pulverilokero ulos ja annostele aineet.

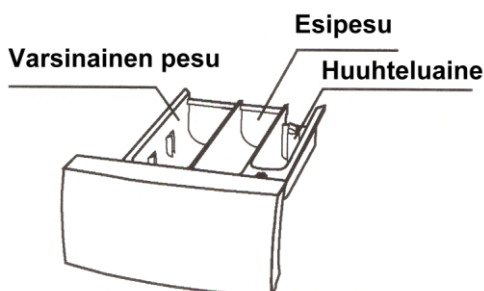

PULVERIPESUAINHEET

Esipesuaine: keskimmäiseen lokeroon
Pesuaine: vasempaan lokeroon


Suositus 1/3 pesuaineen kokonaismäärästä esipesuun.

NESTEMÄISET PESUAINHEET

(ei huuhteluaine)

Annostele pesuaine pesupalloon ja aseta se rumpuun pyykin päälle. Sulje täyttöluukku ja valitse pesuohjelma. HUOM! pesupalloa ei saa käyttää ohjelma 1 kanssa.

HUUHTELUAINE


Annostele huuhteluaine oikeanpuoleiseen lokeroon, joka on merkitty  symbolilla.

Noudata pesuainevalmistajan annosteluohjeita. Koneessa saa käyttää vain pyykin koneelliseen vesipesuun tarkoitettuja pesuaineita


Sulje lokero annosteltuasi pesuaineet !

6. Käynnistys

Ilman rahastinta oleva kone

 
Paina kerran ohjelman käynnistysnappia  ja kone käynnistyy.

Rahastimella varustettu kone

Laita rahastimeen ohjelman taksan verran maksua. Paina kerran ohjelman käynnistysnappia  ja kone käynnistyy.

 
7. Ohjelman päätyttyä

Ohjelma on päättynyt kun näytössä näkyy Stop tai näyttö on sammunut ja virtavallo palaa. Näyttö sammuu 3 minuuttia ohjelman päättymisen jälkeen.

Paina luukun avausnappia , luukku avautuu 3 sekunnin kuluttua.

 
KORKEATEHOLINKOAVA PESUKONE ESTERI P5, P5/AV

2.1 OHJELMAPANEELI

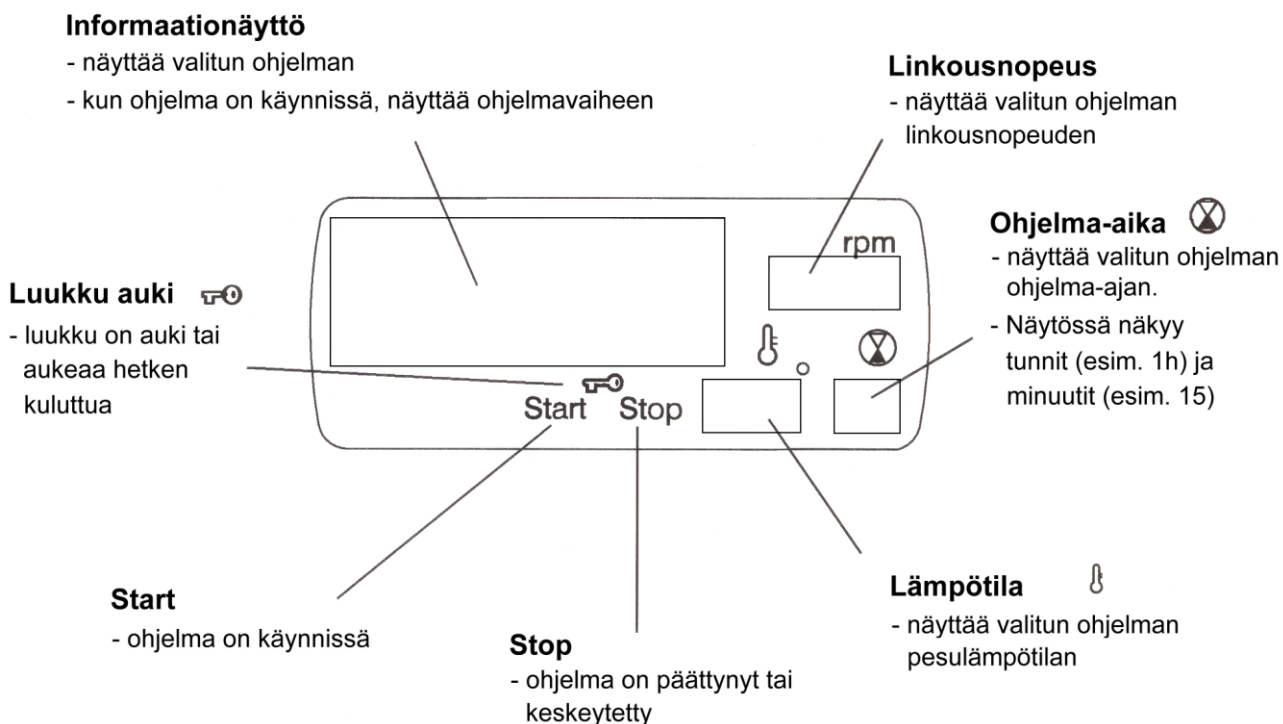



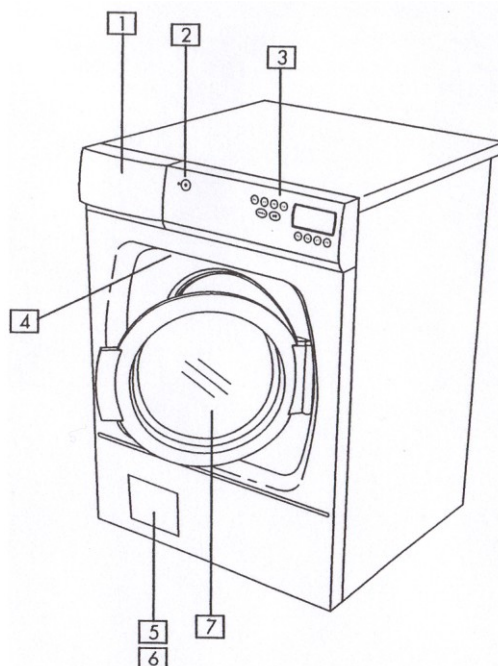


 
 

 




 


 




 
 

 




 
 


 



 
 
 
 



 
 
 
 
 

 


 
 

 
 
2.2 KÄYTTÖLAITTEET


Pos.	Laite
1	Pesuainelokero
2	Virtakytkin
3	Ohjelmavalitsimet ja -näyttö
4	Tyypikilpi
5	P5/AV Huoltoluukku / Luukun hätäaukaisin
6	P5 Poistopumpun sihti / Luukun hätäaukaisin
7	Täyttöluukku



KORKEATEHOLINKOAVA PESUKONE ESTERI P5, P5/AV

2.3 OHJELMAKUVAUS JA PESUAJAT

OHJELMA- NUMERO	OHJELMA- KUVAUS	TEKSTIILI SYMBOLI	ESIPESU		PESU	HUUHTELU 1		HUUHTELU 2		HUUHTELU 3	LOPPULINKOUS	AIKA
			LÄMPÖTILA / VESITASO	LÄMPÖTILA / VESITASO		VESITASO	LINKOUS	VESITASO	LINKOUS			
1	TEHO- PESU				90 °C 							85
2	NORMAALI- PESU				60 °C 							115
3	KEVYT- PESU				60 °C 							55
4	NORMAALI- PESU				40 °C 							49
5	SILIÄVÄT / SYNTEET				40 °C 							36
6	PIKA-PESU				40 °C 							32
7	VILLA- PESU				30 °C 							25
8	LINKOUS											5

 MATALA VESITASO
 NORMAALI VESITASO
 KORKEA VESITASO
 LINKOUS

WASHING GUIDE

LAUNDRY

Empty pockets and fasten zips.

First sort the laundry into whites, light colours and dark colours.

 


Read the care labels on the garments and divide up the different piles according to the wash temperature on the care labels.

Note! Underwired bras must be placed in a laundry bag.

 
LOAD MACHINE

Press the power switch. The display will light up.

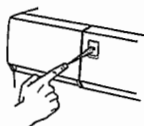

NOTE! If you do not press a button within 3 minutes the display will be switched off. It will light up again when you press a button.

Press the key button to open the door. The door will open after 3 seconds.

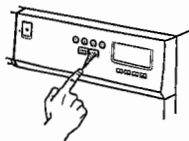

Put the laundry in the drum and close the door.

Program

Heavy wash
Normal wash
Synthetic and Super quick wash
Wool/hand wash

Weight of load

● (5.0 kg)
● (5.0 kg)
◐ (2.5 kg)
◑ (1.7 kg)

WHAT THE DISPLAY SHOWS

Program information

 
When you press P1 to P8 this field shows which program is selected. While the program is running it shows how far the cycle has progressed.

Door open Shows that you have opened the door.

Start
Program has started.

Stop
Program is complete or has been interrupted.

Spin speed
for current program.

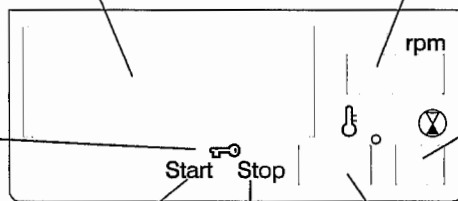

Program time for current program. When you start a program it begins a count-down. The time display switches between hours (e.g. 1h) and minutes (e.g. 22).

Wash temperature for current program.

 
DETERGENT DRAWER

Pour the detergent into the main wash dispenser (2) and, if required, the pre-wash dispenser (1). Pour fabric conditioner into the right-hand dispenser with the symbol.

Reduce the dose if you are washing a small load.

If you use a liquid detergent place it in a detergent ball.

NOTE! A detergent ball cannot be used with program P1.

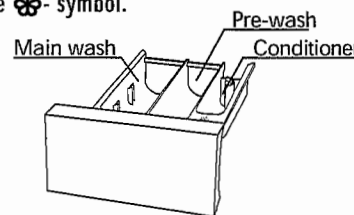

 
 
SELECT PROGRAM

Press one of the program buttons P1 to P8 to choose the program you want to use.

P1 - Heavy wash, 90°C
P2 - Normal wash, 60°C
P3 - Light wash, 60°C
P4 - Normal wash, 40°C

P5 - Synthetic wash, 40°C
P6 - Super quick wash, 40°C
P7 - Wool/hand wash, 30°C
P8 - Spin

Press the Start/Stop button to start the machine. Hold in the Start/Stop button for 3 seconds to interrupt the wash program. The word **Start** will appear on the display to show that the washing program has begun.

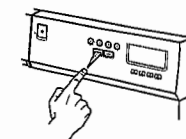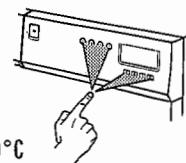

ERROR MESSAGES

0000 flashing at the top right: open the door, redistribute the load and run program 8.

Other messages:

- Write down the error message that is displayed.
- Turn the power switch on the machine off and on again.
- Press the key button and take out the laundry.
- Contact the property management service.

SAFETY PRECAUTIONS

Do not use the machine for dry cleaning.

Only use automatic laundry detergent.

Children must not use this machine.

Do not spray the machine with water when cleaning.

WHEN PROGRAM IS COMPLETE

The word **Stop** will appear on the display when the wash program is complete. The display is switched off three minutes after the end of the wash program.

Press the key button to open the door. The door will open after 3 seconds. Take out the laundry.

Check that the drum is empty and close the door.

Switch off the washing machine.

