




Käyttöohjeet kuivaajalle

Ohje



1 Valitse ohjelma

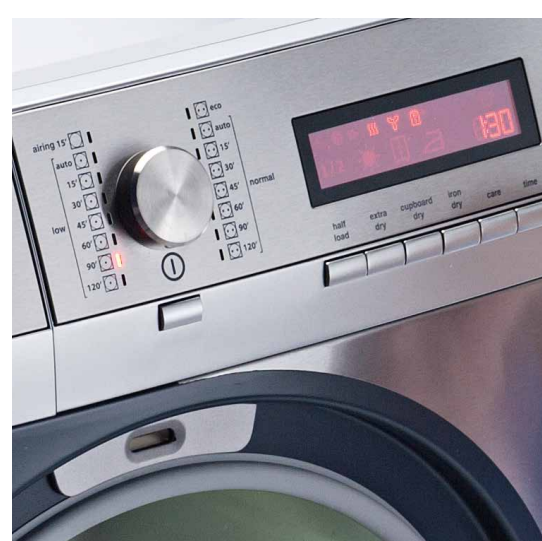


2 Lisää ohjelmien yhdistelmä ja/tai käynnistä ohjelma painamalla ►



3 Kuivaus on valmis äänimerkin soidessa

Lisätietoja myPRO:n ominaisuuksista ja eduista on osoitteessa
www.mypro.electrolux.com

Ohjauspaneeli

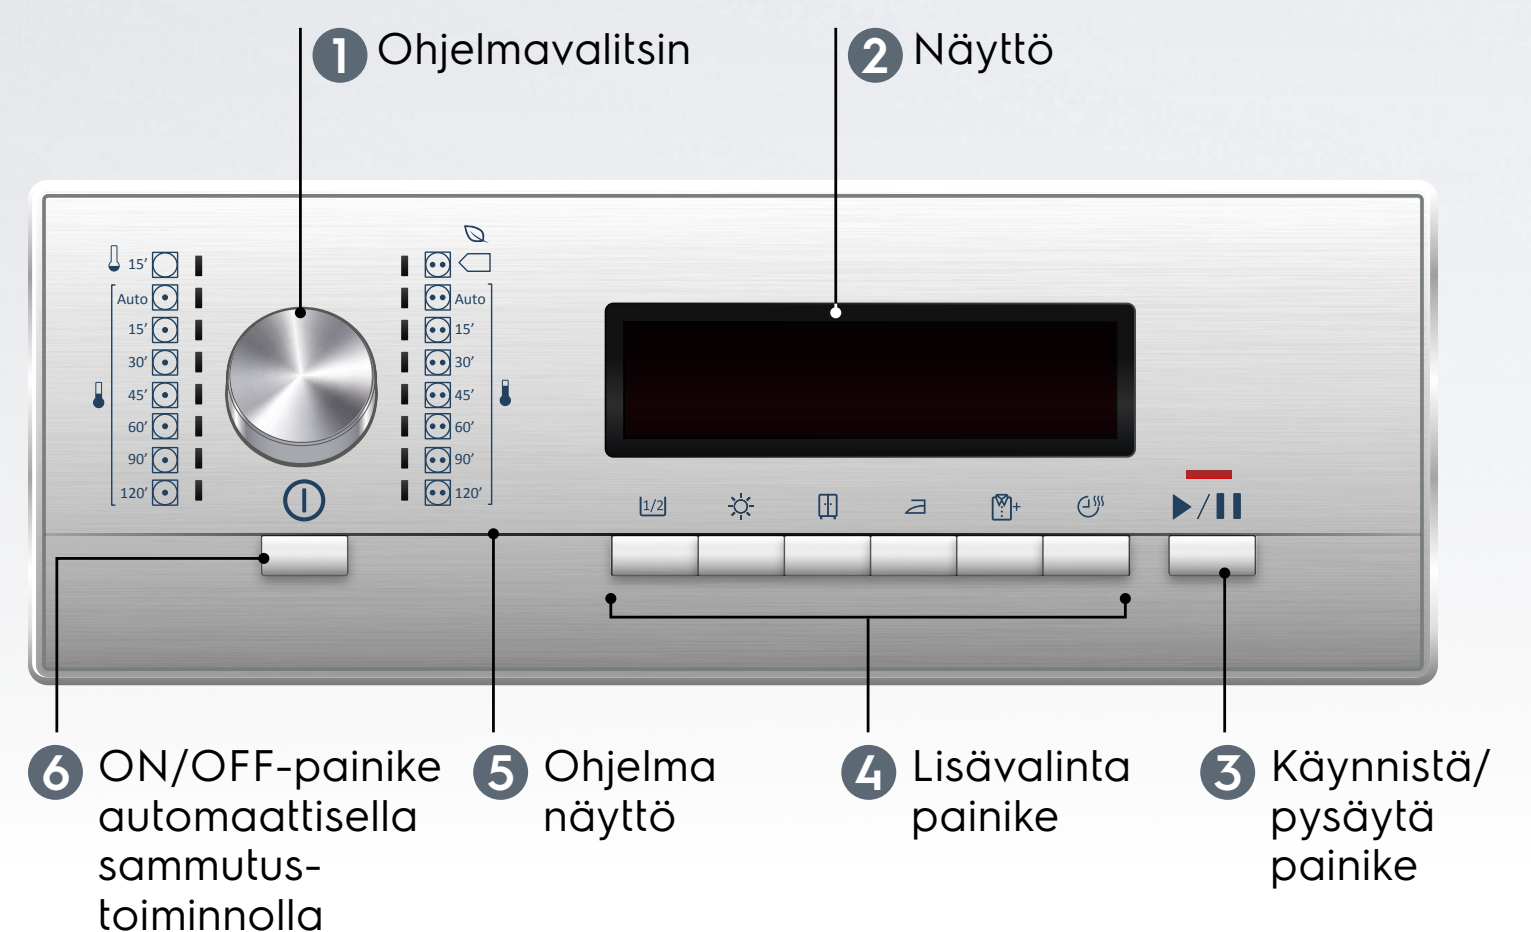



Ohjelmat



-   **Puuvilla ja pyyhkeet** - energiatehokkain ohjelma


-   **Puuvilla ja pyyhkeet** - vakio lämpötila

-   **Helposti pestävä viskoosi, puuvillasekoitekankaat ja hienopyykki** - alhainen lämpötila

Lisävalinnat

-  **Jos täytös jää vajaaksi, valitse tämä lisävalinta**  **Erikoiskuiva** - tällä lisävalinnalla pyykki kuivuu erittäin kuivaksi

-  **Kuivuus** - kaappikuiva  **Kuivuus** - silityskuiva

-  **Hellävarainen** - tämä valinta estää pyykkiä rypistymästä  **Kuivausajan lisäys** - kuivausaikaa voi pidentää 5 minuutin askelin

Operating instructions for myPRO Dryers

Instruction



Choose program




Add program combination optionally and/or push the ► button to start programme




Drying process is completed when acoustic signal appears


Cleaning filter

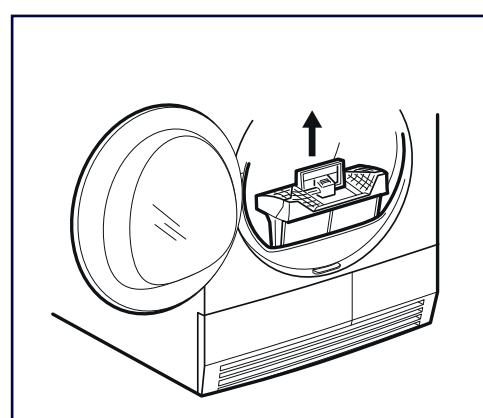

Open the door. Pull the filter up.

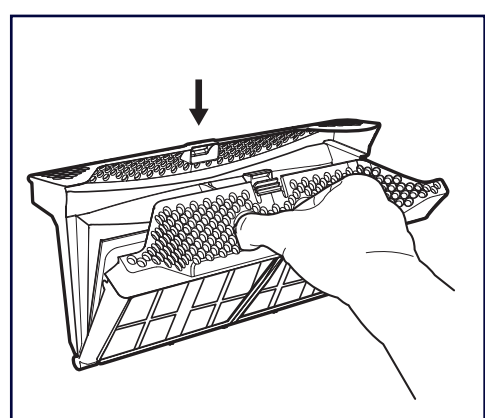


Push the hook to open the filter.

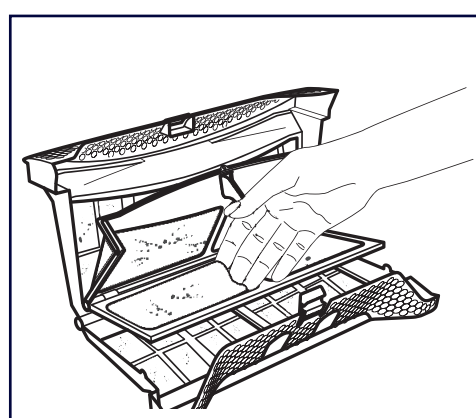





Gather lint with your hand from the internal parts of the filter. Throw the lint in the dustbin.

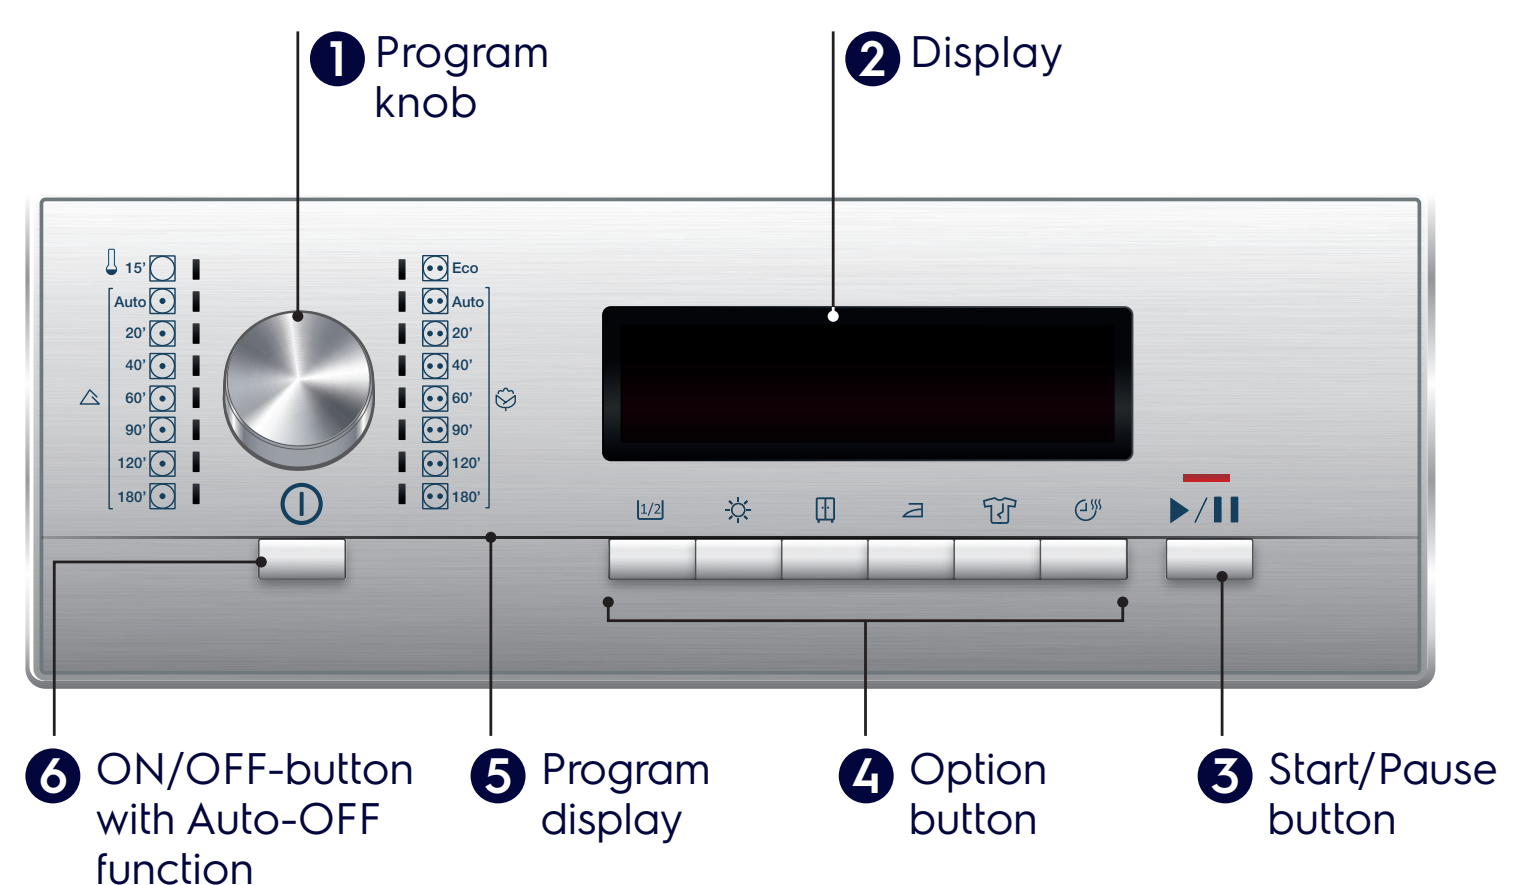If necessary, remove lint from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

 





Control panel



Programs

-  **Eco** **Cotton and towelling** - the most efficient programme concerning energy consumption
-  **Cotton and towelling** - normal temperature
-  **Easy-to-clean, viscose, cotton blend fabrics and delicate fabrics** - Low temperature
-  **Airing** bedspreads, duvets and bedclothes.

Options

-  **1/2** If loading capacity is not fully required, use this option
-  **Extra Dry** - This option dries laundry more intensely
-  **Dryness - Cupboard dry**
-  **Dryness - Iron dry**
-  **Care** - This option prevents laundry from creases
-  **Time dry option** - User can increase time of drying in 5 min steps

Find out more about the advantages of myPRO
www.electroluxprofessional.com