


Käyttöohje (1710169)

Kuivausrumpu TALPET CD 165, 220 ja 350 (Dx 3 RS)

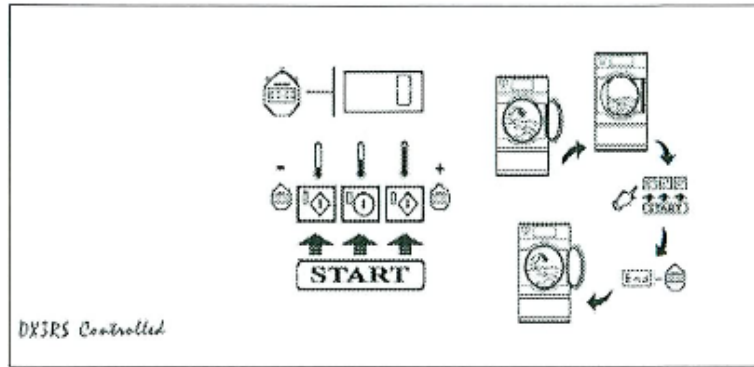

Yleistä

Rumpukuivaus on nopea, helppo ja energiataloudellinen tapa kuivattaa pyykkiä. Pyykin tulee kuitenkin olla lingottua ennen rumpukuivausta. Rumpukuivauksen jälkeen pyykki on pehmeää ja helposti jälkikäsiteltävää. Mankeloitavat pyykkit kannattaa jättää hieman kosteiksi. Villaa ja pellavaa lukuun ottamatta lähes kaikki materiaalit soveltuvat rumpukuivaukseen. Tarkista kuitenkin pesumerkit kuivattavasta pyykistä.

Kuivausrummun käyttäminen on helppoa käyttöpaneelin valintapainikkeilla. Kuivausrumpu on varustettu näytöllä, joka kertoo lämpötilan ja kuivausajan. Kaikissa malleissa on nukkasuodatin, joka on aina puhdistettava huolellisesti ennen koneen käyttöä ja sen jälkeen.

Käyttöpaneelin oikealla puolella on keltaisella renkaalla merkitty punainen HÄTÄSEIS-painike, jonka painaminen sammuttaa koneen. HÄTÄSEIS-painike on tarkoitettu käytettäväksi ainoastaan vaaratilanteissa, eikä sitä tarvita koneen normaalissa käytössä. HÄTÄSEIS-painikkeen painamisen jälkeen konetta voidaan käyttää vasta, kun painike on vapautettu vetämällä punaista nuppia.


Kuivausrummussa ei saa kuivattaa pyykkiä, joka on käsitelty tulenaroilla tai myrkyllisillä aineilla. Itsesyttymisvaaran takia kuivia pyykkejä ei saa pitää turhaan rummussa. Kuivausrumpua ei saa pestä juoksevalla vedellä.


Valmistelevat toimet

Kytke virta turvakytkimestä. Avaa alaluukku ja puhdista nukkasuodatin kevyesti harjaamalla. Laita lingottu märkä pyykki oikaistuna ja kuohkeana rumpuun. Rumpuun ei saa laittaa vettä valuvaa pyykkiä. Sulje täyttöluukku kevyesti painamalla. Tarkista pesumerkeistä, että pyykki kestää rumpukuivausta. Älä ylitä enimmäistäyttömääriä:

| Malli | Kapasiteetti | Malli | Kapasiteetti | Malli | Kapasiteetti |
|--------|--------------|--------|--------------|--------|--------------|
| CD 165 | 7-10 kg | CD 220 | 8-11 kg | CD 350 | 12-17 kg |

Ohjelman ja lämpötilan valinta

Valitse haluamasi kuivauslämpötila kuivatettavan pyykin mukaan valintapainikkeista, jotka on merkitty -symbolein.

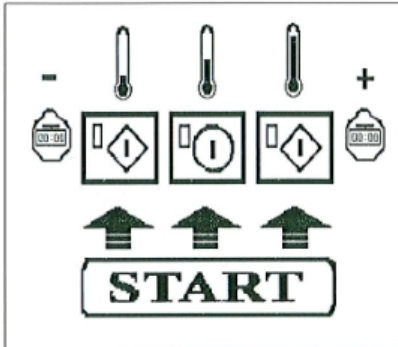

oikeanpuoleinen

- valkopyykki



keskimmäinen

- kirjopyykit/siliävät





vasemmanpuoleinen

- hienopyykki

Kuivausrumpu käynnistyy ja käy 30 minuuttia. Kuivausaikaa voit pidentää tai lyhentää painamalla valintapainikkeita uudestaan. Vasemmanpuoleinen valintapainike lyhentää kuivausaikaa ja oikeanpuoleinen vastaavasti pidentää sitä. Tarvittaessa voit pysäyttää rumpun painamalla keskimmäistä valintapainiketta. Rumpun voi tarvittaessa pysäyttää myös avaamalla täyttöluukun. Käynnistä rumpu uudelleen painamalla valintapainiketta. Rumpu käynnistyy ja käy aiemmin valitun ajan loppuun. Kuivausvaiheen aikana voit myös ottaa ohuet ja helposti kuivuvat pyykit pois.

Näytössä näkyy vuorotellen jäljellä oleva kuivausaika ja kuivauslämpötila.

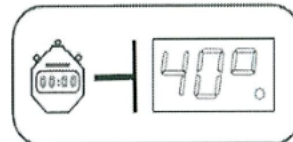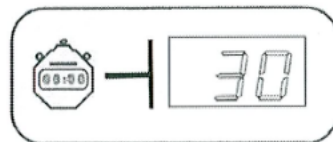

Mikäli kuivausrumpu on varustettu rahastimella, suorita maksu ennen koneen käynnistämistä. Katso myös erillistä rahastimen käyttöohjetta.

Käytön jälkeen


Avaa alaluukku ja puhdista nukkasuodatin kevyesti harjaamalla. Jätä täyttöluukku auki ja kuivausrumpu siistiin kuntoon seuraavalle käyttäjälle.



Talpet - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi

Operating Manual (1710170) Tumble dryer TALPET CD 165, 220 and 350 (Dx 3 RS)

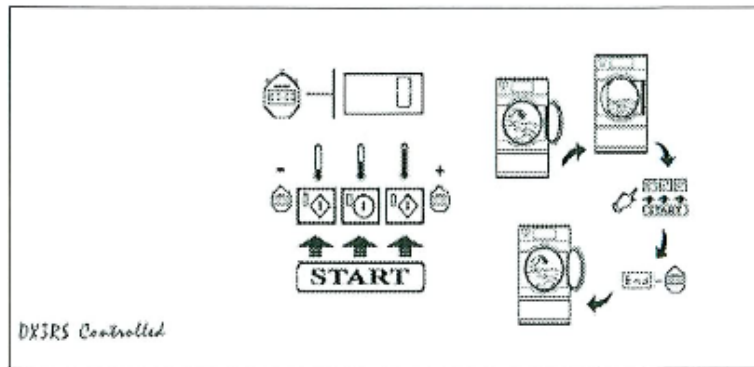

General

Tumble drying is a fast, easy and energy efficient way of drying laundry. The laundry must be spin-dried before tumbling. After tumble drying laundry is soft and easy to be processed further. Laundry intended for ironing or mangling should be left slightly damp. Apart from wool and linen, nearly all materials are suitable for tumble drying. Despite this, always check the care labels before tumble drying.

Using the tumble dryer is easy with the control panel selection buttons. The dryer is equipped with a display that shows the drying temperature and duration. All models have a lint filter, which must always be carefully cleaned before and after using the machine.

On the left side of the control panel, there is a red EMERGENCY STOP button marked with a yellow ring. Pressing this button immediately shuts down the machine. The button is intended for use in emergency situations only and is not needed during normal operation. To restart the machine after using the emergency stop, pull the red button to release it.


Laundry treated with flammable or toxic substances must not be dried in the tumble dryer. Due to the risk of spontaneous combustion, dry laundry must not be left in the drum unnecessarily. The tumble dryer must not be cleaned with running water.


Preparatory Steps

Turn on the safety switch located on the wall. Open the lower hatch and clean the lint filter by gently brushing it. Place the spun, damp laundry into the drum, making sure it is untangled and fluffy. Do not place dripping wet laundry into the drum. Close the loading door by pressing it gently. Check the care labels to ensure the laundry is suitable for tumble drying. Do not exceed the maximum load limits:

| Model | Capacity | Model | Capacity | Model | Capacity |
|--------|----------|--------|----------|--------|----------|
| CD 165 | 7-10 kg | CD 220 | 8-11 kg | CD 350 | 12-17 kg |

Selecting the drying program and temperature

Select the desired drying temperature according to the laundry type using the selection buttons marked with the symbol .

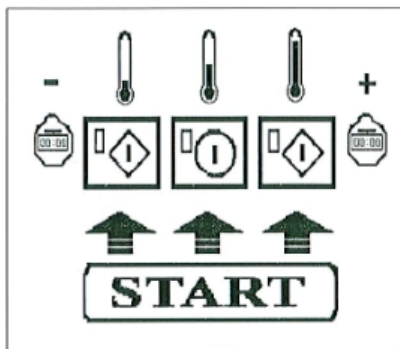

right button

- white laundry



middle button

- colored laundry/easy-care fabrics





left button

- delicate fabrics

The dryer will start and run for 30 minutes. You can extend or shorten the drying time by pressing the selection buttons again. The left button shortens the drying time, while the right button increases it. If necessary, you can stop the drum by pressing the middle selection button. The dryer can also be stopped by opening the loading door. To resume drying, press any selection button again. The drum will continue running for the remaining time previously selected. During the drying phase, you may also remove lightweight or quick-drying items.

The display alternates between showing the remaining drying time and the selected drying temperature.

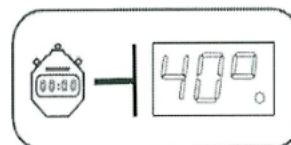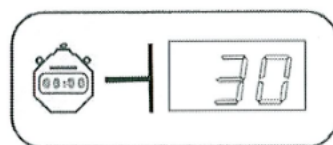

If the dryer is equipped with a payment system, make the payment before starting the machine. For more information, refer to the separate instructions for the payment system.

After Use

Open the lower hatch and clean the lint filter by brushing it gently. Leave the loading door open and ensure the dryer is clean and ready for the next user.



Talpet

- täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi