

## Käyttöohje (2010004)

### Kuivausrumpu TALPET DAM 7 HP



## Yleistä

Rumpukuivaus on nopea, helppo ja energiataloudellinen tapa kuivattaa pyykkiä. Pyykin tulee kuitenkin olla lingottua ennen rumpukuivausta. Rumpukuivauksen jälkeen pyykki on pehmeää ja helposti jälkikäsiteltävää. Mankeloitavat pyykit kannattaa jättää hieman kosteiksi. Villaa ja pellavaa lukuun ottamatta lähes kaikki materiaalit soveltuvat rumpukuivaukseen. Tarkista kuitenkin pesumerkit kuivattavasta pyykistä. Merkillä  varustetut tekstiilit soveltuvat rumpukuivaukseen, ja  merkillä varustetut tekstiilit eivät sovellu rumpukuivaukseen. Kuivausrummussa ei saa kuivata vaahtomuovia, lasikuitumateriaaleja, kemiallisesti pestyjä tekstiilejä, tulenaroilla tai myrkyllisillä aineilla käsiteltyjä tekstiilejä tai tekstiilejä, joissa on merkintä ”Ei saa kuivata lämmönlähteen lähellä”. Mattojen ja vastaavien kuivaus on kielletty!

Itsesyttymisvaaran takia kuivia pyykkejä ei saa pitää turhaan rummussa. Kuivausrumpua ei saa pestä juoksevalla vedellä.

Kuivausrumpu on varustettu opastavalla näytöllä, ja käyttö on helppoa käyttöpaneelin ohjelmanvalitsimella ja painikkeilla.

Kuivausrumpu Talpet DAM 7 HP on varustettu yhdellä nukkasuodattimella, joka tulee puhdistaa jokaisen kuivauskerran jälkeen tämän ohjeen mukaisesti.

## Valmistelevat toimet

Kytke virta seinällä olevasta turvakytkimestä.

Avaa täyttöluukku ja tarkista, että nukkasuodatin on puhdas, ja puhdista se tarvittaessa. Laita lingottu pyykki oikaistuna ja kuohkeana rumpuun. Sulje täyttöluukku kevyesti painamalla.

Kytke virta käyttöpaneelin pääverkkokytkimestä.

Mikäli kone on kytketty rahastinlaitteeseen, tutustu myös sen käyttöohjeeseen.

## Ohjelman valinta

Valitse pyykille soveltuva ohjelma käyttöpaneelin ohjelmavalitsimella.

## Koneen käynnistäminen

Laitteen kielivalikon voi avata vasemmanpuolimmaisella valintapainikkeella, ja kielen voi valita selaamalla ohjelmanvalitsimella ja painamalla kielen kohdalla olevaa valintapainiketta.

Ohjelmia pystyy selaamaan käyttöpaneelin ohjelmanvalitsimella, ja ohjelma valitaan näytön alapuolisilla valintapainikkeilla. Paina ohjelman valinnan jälkeen **Start/Stop**-painiketta aloittaaksesi ohjelman. Arvio jäljellä olevasta kuivausajasta näkyy näytössä muutaman minuutin kuluessa kuivausohjelman käynnistymisestä.

Voit keskeyttää ohjelman painamalla lyhyesti **Start/Stop**-painiketta. Lisää tai poista pyykkiä, sulje luukku ja paina **Start/Stop**-painiketta. Uusi arvioitu ohjelma-aika näkyy muutaman minuutin kuluttua. Voit lopettaa ohjelman painamalla **Start/Stop**-painiketta kolmen sekunnin ajan. Valittu ohjelma päättyy, ja jäähdytysvaihe alkaa. Jäähdytysvaiheen kesto riippuu valittuna olleesta ohjelmasta.

## Käytön jälkeen


Laite ilmoittaa näytöllä ohjelman päättymisestä. Viiden minuutin kuluttua kuivausohjelman päättymisestä näyttö kytkeytyy energiansäästötilaan. HP-malleissa kompressorin jäähdytyspuhallin jatkaa jonkin aikaa käyntiä ohjelman päätyttyä, mutta pysähtyy automaattisesti.

Tyhjennä kondenssivesisäiliö jokaisen kuivauskerran jälkeen, mikäli sitä ei ole kytketty viemäriin. Vedä säiliö ulos, tyhjennä vesi ja työnnä säiliö takaisin. Jos kondenssivesisäiliö tulee liian täyteen, ohjelma keskeytyy ja näytössä lukee ilmoitus ”Ylitulviminen”. Tyhjennä säiliö ja aloita uusi ohjelma painamalla **Start/Stop**-painiketta.


**HUOM!** Puhdista täyttöluukun nukkasuodattimet jokaisen kuivauskerran jälkeen ohjeen mukaisesti. Tyhjennä säiliö jokaisen kuivauskerran jälkeen, mikäli sitä ei ole kytketty viemäriin.

**HUOM!** Höyrystimen ja kondenssiveden nukkasuodattimet on puhdistettava, kun koneen näyttö niin osoittaa tai useammin.


## Nukkasihdin puhdistaminen

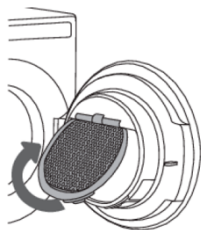

1. Avaa nukkasuodatin.

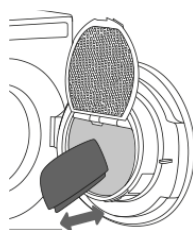

2. Poista nukka suodattimesta ja kaikilta reunoilta.

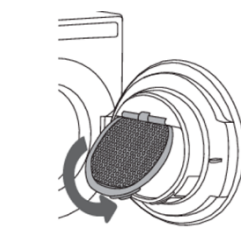

3. Sulje nukkasuodatin ennen täyttöluukun sulkemista.



### Turvallisuusohjeita ja varoituksia! ⚠

- Jos nukksihti tukkeutuu, koneen automaattinen ylikuumentensuojaja saattaa laueta. Puhdista nukksihti ja anna koneen jäähtyä noin 30 minuuttia ennen uudelleen käynnistystä.
- Kuivauksen päätyttyä katkaise virta pääkytkimestä. Poista pyykki rummusta ja sulje luukku.

### Ongelmatilanteessa


Ilmoita viasta kiinteistönhuoltoon ja ota pyykki koneesta.





**Talpet** - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi
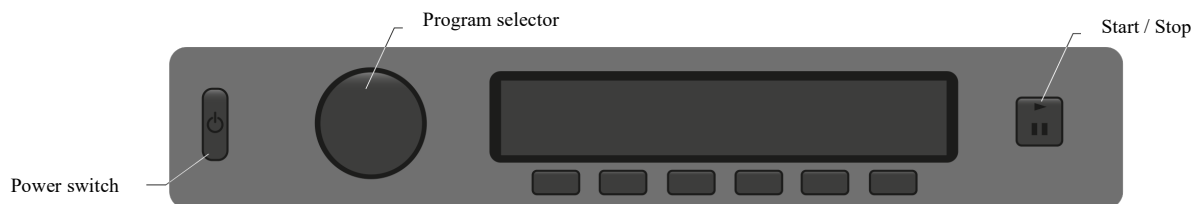
## Operating instructions (2010005) Tumble dryer **TALPET DAM 7 HP**



### General

Tumble drying is a fast, easy and energy efficient way of drying laundry. However, the laundry must be spin-dried before tumble drying. After tumble drying laundry is soft and easy to be processed further. If the laundry is to be wringed, it is a good idea to leave it slightly damp. Apart from wool and linen, nearly all materials are suitable for tumble drying. Despite this, always check the care labels before tumble drying. All materials with the symbol  are suitable to be tumble dried. Materials with the symbol  are not suitable for tumble drying. Clothes that have been chemically washed at home, or that contain foam plastic or fiberglass materials must not be tumble dried. The materials that have been treated with inflammatory or toxic products or materials marked with “Do not dry near heat” must not be tumble dried. Do not dry carpets or similar items in this machine!

To prevent the risk of spontaneous combustion the dry laundry should not be kept in the dryer for unnecessary time. The dryer must not be cleaned with running water.

The tumble dryer is equipped with a guiding user interface. Use of the dryer is easy by using the program selector and the selection buttons below the display.

Talpet DAM 7 HP tumble dryer is equipped with a lint filter that must be cleaned after every use by following the instructions provided later in this manual.

### Before using the tumble dryer

Turn on the safety switch located on the wall.

Open the door of the dryer and make sure that the lint filter is clean. Clean the lint filter if needed. Place the laundry that has been spun, detangled, and fluffed in the machine. Close the door by gently pressing.

Turn the power on by pressing the power switch on the machine.

### Selecting a program

Select a program suitable for your laundry by rotating the program selector.

## Starting the machine

The language selection of the machine may be viewed by pressing the button on the most left under the display. The language can be chosen by browsing the languages with the program selector and pressing the selection button located by the desired language.

Browse programs by rotating the program selector and choose the desired program with a selection button located next to the program right under the display. After selecting the program press the **Start/Stop** button to start the machine. A few minutes after the program has started, the display indicates an estimate of the remaining drying time.

To pause a program, briefly press the **Start/Stop** button. Add or remove laundry, close the door, and press the **Start/Stop** button. The new estimated program time is displayed a few minutes after the program has been resumed. To stop and cancel the program, press the **Start/Stop** button, and hold it for 3 seconds. The selected program will be stopped, and the cooling stage will begin. Cooling time depends on the selected program.

## After using the dryer


The display indicates when the program has finished. Five minutes after the drying program has ended the display will switch to energy conservation mode. HP models have a compressor cooling fan that will run for a while after the program has finished. It will shut down automatically.

Empty the condensed water container after every use if it is not connected to the drain. Pull the container out, empty the water and push the container back in. If the container is too full, the program pauses, and the display indicates “overflow”. Empty the container and start a new program by pressing the **Start/Stop** button.


**NOTE!** Empty the lint filters on the dryer door after every use according to the instructions. Empty the container after every use if it is not connected to the drain.

**NOTE!** The lint filters in the vaporizer and the condensed water container must be cleaned when the dryer display so indicates, or more often.

## Cleaning the net filter in the door

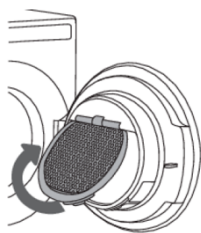

1. Lift the net filter cover.

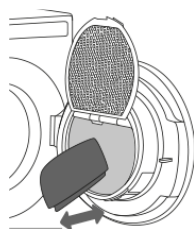

2. Remove the lint from the net filter and from all edges of the net filter container.



3. Close the net filter cover before shutting the dryer door.



## Safety instructions and warnings

- If the lint filter gets blocked, the automatic overheat protection may go off. Clean the lint filter and let the machine cool down for approximately 30 minutes before restarting.
- After the program has finished, turn the power off from the main power switch. Remove laundry from the dryer and close the door.

## In case of problems

Notify the house janitorial service of malfunction and remove laundry from the machine.



**Talpet** - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi