


Käyttöohje (60165-661)

Pesukoneet **TALPET HD 60, 65, 75, 100, 135 ja 165** (Cygnus Commercial Control)

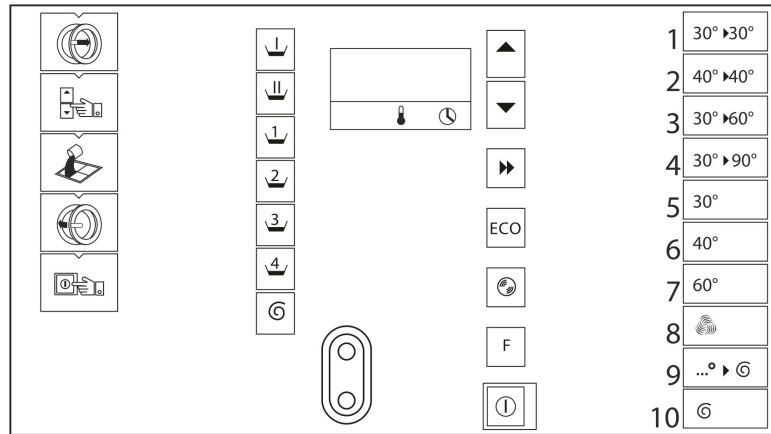

Yleistä

Koneen käyttöpaneelissa on näyttö, joka näyttää lämpötilan, jäljellä olevan pesuajan ja käynnissä olevan pesuohjelman numeron. Koneen käyttöpainikkeet on sijoitettu näytön oikealle puolelle ja ohjelman vaiheista ja etenemisestä kertovat merkkivalot näytön vasemmalle puolelle.

MERKKIVALOT

Esipesu




Pesu



Huuhtelut



Linkous



KÄYTTÖPAINIKKEET

Ohjelman valinta



Ohjelman ohitus



Eko -toiminto



Linkousnopeuden säätö



Erikoistoiminnot



START/STOP



Käyttöpaneelin vasemmalla puolella on keltaisella renkaalla merkitty punainen HÄTÄSEIS -painike, jonka painaminen sammuttaa koneen. HÄTÄSEIS -painike on tarkoitettu käytettäväksi ainoastaan vaaratilanteissa, eikä sitä tarvita koneen normaalissa käytössä. HÄTÄSEIS -painikkeen painamisen jälkeen konetta voidaan käyttää vasta, kun painike on vapautettu kiertämällä punaista nuppia nuolten osoittamalla tavalla myötöpäivään.

Koneen täyttöluukku avataan vetämällä kahvasta kevyesti ja suljetaan painamalla kahva kiinni rauhallisesti.

Konetta ei saa pestä juoksevalla vedellä.

Valmistelevat toimet

Tarkista, että vesisulut ovat auki. Vesisulut tulee pitää suljettuina, kun konetta ei käytetä.

Tarkista, että virta on kytkettynä seinällä olevasta turvakytkimestä. Kytkin tulee pitää aina päällä eli ON tai I -asennossa. Mikäli virta on kytkettynä seinällä olevasta turvakytkimestä, mutta koneen näyttö on pimeänä, tarkista ettei HÄTÄSEIS -painiketta ole painettu ja jätetty vapauttamatta (ks. kohta yleistä).

Lajittele pyykki pesumerkkien mukaan ja tarkista, että taskut ovat tyhjä. Vieraiden esineiden joutuminen pesurumpuun voi vaurioittaa konetta. Seuraavassa taulukossa näkyvät mallisarjan koneiden kapasiteetit eli kerralla pestävän kuivan pyykin enimmäismäärät kiloina. Hienopyykkiä pestäessä täyttömääräksi suositellaan enintään puolta koneen kapasiteetista.

Malli	Kapasiteetti	Malli	Kapasiteetti	Malli	Kapasiteetti
HD 60	5,5 kg	HD 75	7,5 kg	HD 135	13,5 kg
HD 65	6,5 kg	HD 100	10 kg	HD 165	16,5 kg











MATTOJEN JA VASTAAVIEN PESU ON KIELLETTY!


Laita pyykki koneeseen kuohkeasti ja sulje täyttöluukku rauhallisesti.

Mikäli kone on kytketty rahastinlaitteeseen, tutustu myös sen käyttöohjeeseen. Pesuohjelman myyvää rahastinta käytettäessä koneen näytössä näkyy ”Not Active”, kunnes maksu on suoritettu rahastimeen.

Ohjelman valinta

Valittavana on pesuohjelmat 1-10 ja näyttö osoittaa valitun ohjelman.

	Ohjelman numero	Ohjelman sisältö:		
		esipesu	pesu	linkous
1 	1	30 C	30 C	500
2 	2	40 C	40 C	1000
3 	3	30 C	60 C	1000
4 	4	30 C	90 C	1000
5 	5	-	30 C	500
6 	6	-	40 C	1000
7 	7	-	60 C	1000
8 	8	-	villa	500
9 	9	huuhtelu ja linkous		1000
10 	10	linkous		1000


Valitse haluamasi ohjelma  -painikkeilla.

Pesuohjelmien sisällöt on kuvattu symbolein myös koneen etupaneelissa.

Pesu-, huuhtelu- ja valkaisuaineen annostelu

Annostele pesu-, huuhtelu- ja valkaisuaine pesuainelokeroihin alla olevien kuvien mukaisesti. Noudata aina aineiden valmistajien annosteluohjeita.


Pesujauheen annostelu

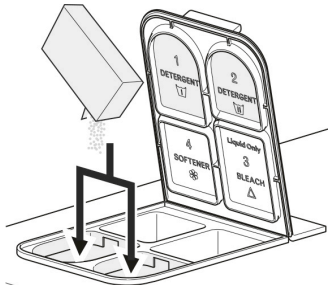

ESIPESU (I)

PESU (II)


Nestemäisen pesuaineen annostelu

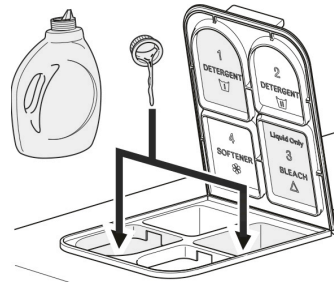



ESIPESU (I)

PESU (II)

Huuhteluaineen annostelu

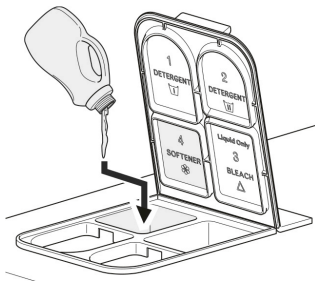


Valkaisuaineen annostelu

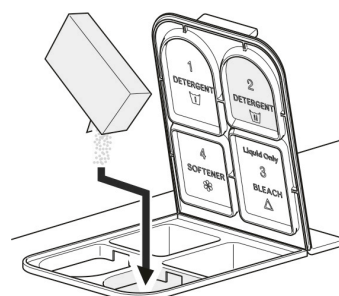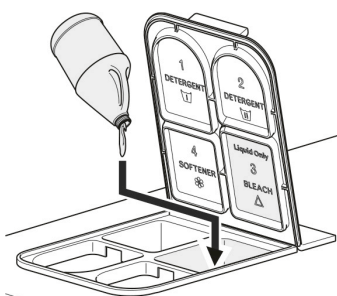

Ennen koneen käynnistämistä valittavat lisätoiminnot



Vajaatäyttö


Pestäessä pieniä määriä pyykkiä voidaan valita vajaatäyttötoiminto  -painikkeella. Painikkeen vieressä oleva merkkivalo osoittaa toiminnon olevan käytössä.

Linkousnopeuden säätö


Pesuohjelman linkousnopeutta voi muuttaa seuraavasti:

Paina linkousnopeus  -painiketta, jolloin näytössä näkyy ohjelman linkousnopeus


Linkousnopeutta voi nyt muuttaa   -painikkeilla


Paina  -painiketta vahvistaaksesi valinnan


Erikoistoiminnot

 -painikkeella valittavat erikoistoiminnot (lisävaruste) ovat käytössä vain erikoismalleissa


Koneen käynnistäminen

Kone käynnistetään painamalla  -painiketta.

Tarvittaessa pesuohjelma voidaan keskeyttää painamalla  -painiketta. Pesuohjelman keskeyttämisen jälkeen täyttöluukku voidaan avata, kun näyttöön on ilmestynyt teksti ”End” rummun pysähtymisen ja tyhjentymisen jälkeen.

Mikäli rahastimella varustetun koneen pesuohjelma keskeytetään painamalla  -painiketta yli 5 minuutin kuluttua ohjelman käynnistämisestä, edellyttää koneen käynnistäminen uudelleen yleensä uuden maksun suorittamista rahastimeen. Tilanne riippuu kuitenkin käytössä olevasta rahastimesta ja kytkennästä.

Ohjelman vaiheiden ohittaminen

Pesuohjelman vaiheita voi tarvittaessa ohittaa painamalla ohjelmanohitus  -painiketta ja toimintoa voi seurata ohjelman eri vaiheiden merkkivaloista.

Käytön jälkeen

Ohjelman päätyttyä näyttöön tulee teksti ”End” ja täyttöluukku voidaan avata. Jätä täyttöluukku auki ja kone siistiin kuntoon seuraavalle käyttäjälle.

Turvallisuusohjeita ja varoituksia

- Koneetta ei saa pestä juoksevalla vedellä.
- Lapsia on valvottava, jotta he eivät leiki koneella.
- Älä käytä pesukoneetta, jos koneen osia on rikkoontunut tai poistettu.
- Pyykkiä pestäessä käytä vain konepesuainetta.
- Koneetta ei saa käyttää kemialliseen pesuun.
- Tekstiilit, jotka otetaan koneesta ohjelman keskeytyksen jälkeen voivat olla kuumia.

Ongelmatilanteessa

Ilmoita kiinteistöhuoltoon näyttöön tullut vikailmoitus.




TALOPESULAT OY

Vitikka 1 C, 02630 Espoo
Puh. (09) 6869 750, Fax (09) 6869 7520
www.talpet.fi

Operating instructions (60165-661)

Washers **TALPET HD 60, 65, 75, 100, 135 ja 165** (Cygnus Commercial Control)

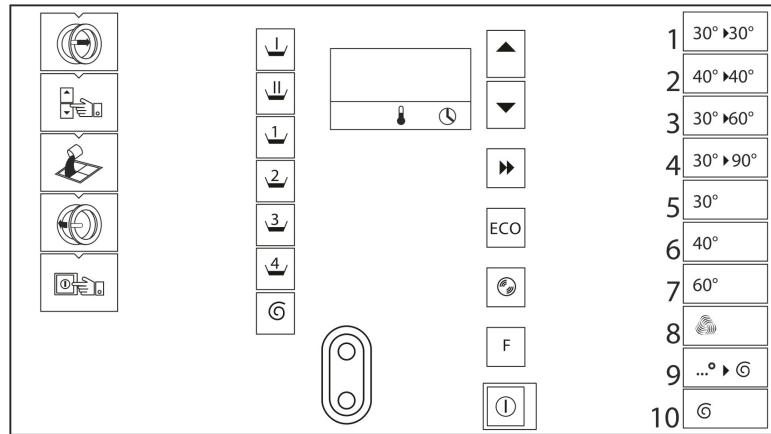

General

The machine operating panel includes a display that indicates the temperature, the remaining wash time and the current program number. The machine operating buttons are placed on the right hand side of the display, and the indicator lights for the program stages and progress on the left.

INDICATOR LIGHTS

Pre-wash




Wash



Rinses



Spin



OPERATING BUTTONS



Program selector



Program bypass



Eco mode



Spin speed adjustment



Special functions



START/STOP

The left side of the control panel has a red EMERGENCY STOP button that is marked with a yellow circle. This will shut the machine down. The EMERGENCY STOP button is to be used only in case of danger, and it is not needed in regular use. After the EMERGENCY STOP button has been pressed, the machine can be started only after the button is released by turning the red knob clockwise, as indicated by the red arrows.

The machine door can be opened by pulling lightly on the handle, and closed by carefully closing the handle.

Do not clean the washing machine under running water.

Before using the machine

Make sure that the water inlet valves are open. Close the valves when the machine is not in use.

Check that the power is switched on from the safety switch on the wall. The switch must always be turned on, that is, in the ON or I position. If the power is switched on from the safety switch but the machine display is off, make sure that the EMERGENCY STOP button has not been pressed and left unreleased (see “General”).

Sort the laundry according to the care labels and make sure that all pockets are empty. Foreign objects in the washer drum may damage the machine. The following table shows in kilograms the capacities (weight of dry laundry) of these washer models. For delicate items it is recommended to use max half of the machine capacity.

Model	Capacity	Model	Capacity	Model	Capacity
HD 60	5,5 kg	HD 75	7,5 kg	HD 135	13,5 kg
HD 65	6,5 kg	HD 100	10 kg	HD 165	16,5 kg











DO NOT WASH CARPETS OR SIMILAR ITEMS IN THIS MACHINE!


Place the laundry in the machine lightly and close the washer door carefully.

If the dryer is connected to a vending machine, read also its instructions. When a wash program vending machine is in use, the display shows “Not Active” until a payment has been made.

Selecting the program

Choose from programs 1-10. The display indicates the selected program.

	Program number	Program contents:		
		pre-wash	wash	spin
1 	1	30 C	30 C	500
2 	2	40 C	40 C	1000
3 	3	30 C	60 C	1000
4 	4	30 C	90 C	1000
5 	5	-	30 C	500
6 	6	-	40 C	1000
7 	7	-	60 C	1000
8 	8	-	villa	500
9 	9	rinse and spin		1000
10 	10	spin		1000

Choose a program by pressing the  button.




The wash program contents are indicated also by symbols on the washer front panel.

Dosing detergent, fabric softener and bleach

Dose the detergent, fabric softener and bleach into the detergent compartments as indicated in the images below. Always follow the detergent manufacturers' dosing instructions.


Dosing the detergent

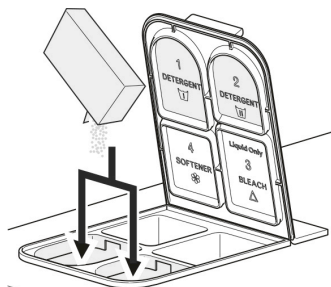

PRE-WASH (I)

WASH (II)


Dosing liquid detergent

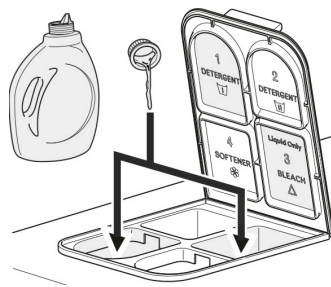



PRE-WASH (I)

WASH (II)

Dosing fabric softener

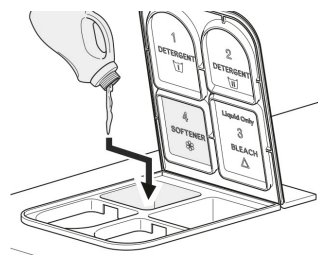


Dosing bleach

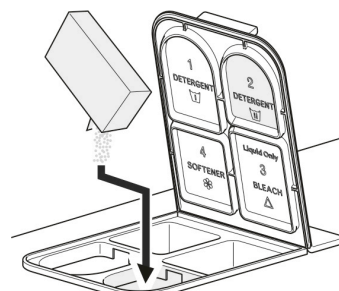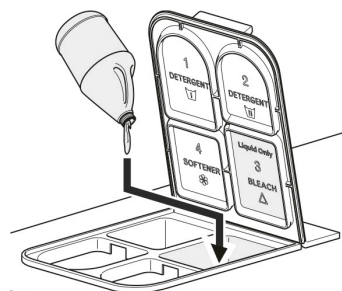


Special functions to be selected before starting the machine


Light load

When only small amounts of laundry is washed, the fill level can be set to light load by pressing the  button. Indicator light next to the button is lighted when the function is in use.

Adjusting the spin speed


The program spin speed can be adjusted as follows:

Press the spin speed  button to display the current spin speed.


Spin speed can now be adjusted by the  buttons.

Press  to verify the selection.


Special functions

The additional functions that can be selected by pressing the  button, are available only in special models.


Starting the machine

The washer is started by pressing the  button.

Program can be cancelled by pressing the  button. After cancelling the program, the washer door can be opened when the drum has stopped and drained water, and the display indicates "End."

If the machine is connected to a vending machine and the program is cancelled by pressing  5 minutes after the program was started, restarting the machine usually requires a new purchase from the vending machine. However, this depends on the type and connection of the vending machine used.

Skipping program stages

If required, wash program cycles can be skipped by pressing the  button. This function can be tracked from the indicator lights for the various stages of the program.

After using the machine

When the program has finished, the display indicates "End" and the door can be opened. Leave the washer door open and clean the machine for the next user.

Safety instructions and warnings

- Do not clean the machine under running water.
- Do not let children play with the machine.
- Do not use the washer if some of its parts are broken or have been removed.
- Use only machine washing detergent.
- Do not use the machine for chemical washing.
- Textiles removed from the machine after aborting the program may be hot.

In case of problems

Notify the house janitorial service of the error message on the display.