

# Käyttöohje pesukoneelle TALPET HW 51

## 1 Pyykki



Tyhjennä taskut, sulje vetoketjut ja lajittele pyykki pesumerkkien mukaisesti.

## 2 Täytä kone


Kytke virta painamalla 0/1 -kytkintä ja avaa vesisulut.

Avaa täyttöluukku painamalla "avain" -painiketta 3 sekunnin ajan. Laita pyykki koneeseen kuohkeasti ja sulje täyttöluukku.

Suosittelavat täyttömäärät pesuohjelmille:


Valkopesu	5 kg
Kirjopesu	5 kg
Hienopesu	2,5 kg
Villapesu	1,7 kg

Pesukoneen näyttö sammuu 3 minuutissa, mikäli ohjelmaa ei valita. Näyttö aktivoituu uudelleen 0/1 -painikkeella.

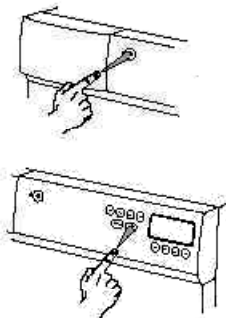

## Näyttö


Näytössä näkyy valittu ohjelma P1-P8 ja ohjelman vaihe.

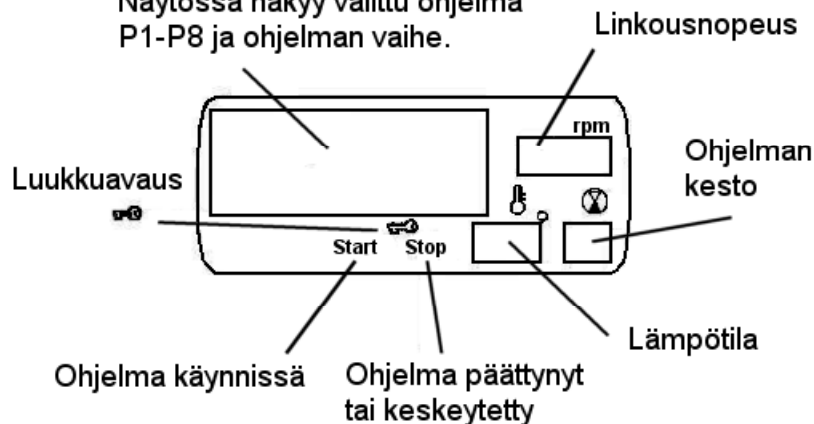

## 3 Pesuainelokero

Annostele huuhtelu- ja pesuaine lokeroon ohjelmavalintasi mukaan.

Esipesuaine: lokero 1  
Pääpesuaine: lokero 2  
Huuhteluaine: lokero 3 (☞)

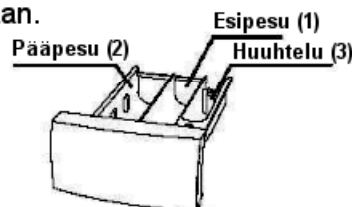


Noudata pesuaineiden valmistajien annosteluohjeita.

## 4 Valitse ohjelma

Valitse ohjelma painikkeilla 1-8:

- 1 Valkopesu 90 °C esipesulla
- 2 Valkopesu 90 °C
- 3 Kirjopesu 60 °C
- 4 Kirjopesu 40 °C
- 5 Tekokuidut 40 °C
- 6 Pikapesu 40 °C
- 7 Villapesu 30 °C
- 8 Linkous



Käynnistä pesuohjelma painamalla "Start/Stop" -painiketta. Näytössä näkyy teksti "Start". Ohjelman voi keskeyttää painamalla "Start/Stop" -painiketta 3 sekunnin ajan.

## Virheilmoitukset

Mikäli näytön oikeassa yläkulmassa vilkkuu "0000", niin avaa luukku ja ota pyykki pois rummusta. Asettele pyykki rumpuun uudelleen ja käynnistä ohjelma 8.

Mikäli näyttöön tulee muita tekstejä, niin kirjoita ne muistiin, tyhjennä kone pyykistä ja katkaise virta. Ota yhteys huoltoyritykseen.



## Turvaohjeita

Kone on tarkoitettu vain normaaliin vesipesuun. Käytä vain matalavaahtoista konepesuainetta. Älä anna lasten käyttää pesukonetta. Koneetta ei saa pestä juoksevalla vedellä. Pyykit voivat olla kuumia, mikäli ohjelma on keskeytetty ennaikaisesti.

## 5 Ohjelman päätyttyä

Ohjelman päätyttyä näytössä näkyy "Stop"

ja näyttö sammuu kolmen minuutin kuluttua. Avaa luukku painamalla "Avain" -painiketta, ota pyykki pois rummusta ja sulje täyttöluukku. Katkaise virta ja sulje vesihanat.

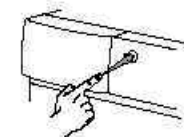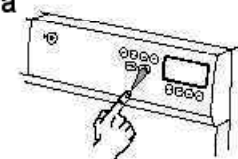


TALOPESULAT OY

# WASHING GUIDE

## 1 LAUNDRY

Empty pockets and fasten zips.

First sort the laundry into whites, light colours and dark colours.

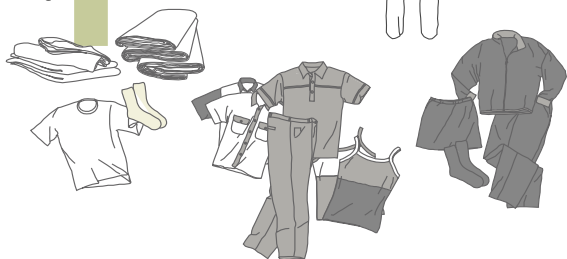


Read the care labels on the garments and divide up the different piles according to the wash temperature on the care labels.

**Note!** Underwired bras must be placed in a laundry bag.


## 2 LOAD MACHINE

Press the power switch. The display will light up.



**NOTE!** If you do not press a button within 3 minutes the display will be switched off. It will light up again when you press a button.

Press the key button to open the door. The door will open after 3 seconds.



Put the laundry in the drum and close the door.

### Program

Heavy wash  
Normal wash  
Synthetic and Super quick wash  
Wool/hand wash

### Weight of load

● (5.0 kg)  
● (5.0 kg)  
◐ (2.5 kg)  
◑ (1.7 kg)

## WHAT THE DISPLAY SHOWS

### Program information

When you press P1 to P8 this field shows which program is selected. While the program is running it shows how far the cycle has progressed.

**Spin speed**  
for current program.


**Program time** for current program. When you start a program it begins a count-down. The time display switches between hours (e.g. 1h) and minutes (e.g. 22).

**Door open** Shows that you have opened the door.

**Start**  
Program has started.

**Stop**  
Program is complete or has been interrupted.

**Wash temperature** for current program.

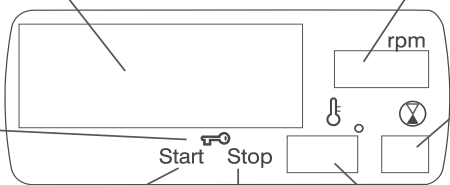


## 3 DETERGENT DRAWER

Pour the detergent into the main wash dispenser ( 2 ) and, if required, the pre-wash dispenser ( 1 ). Pour fabric conditioner into the right-hand dispenser with the symbol.

Reduce the dose if you are washing a small load.

If you use a liquid detergent place it in a detergent ball.

**NOTE!** A detergent ball cannot be used with program P1.

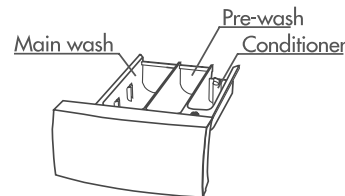



## 4 SELECT PROGRAM

Press one of the program buttons P1 to P8 to choose the program you want to use.

P1 - Heavy wash with pre-wash, 90°C  
P2 - Normal wash, 90°C  
P3 - Normal wash, 60°C  
P4 - Normal wash, 40°C

P5 - Synthetic wash, 40°C  
P6 - Super quick wash, 40°C  
P7 - Wool/hand wash, 30°C  
P8 - Spin

Press the Start/Stop button to start the machine. Hold in the Start/Stop button for 3 seconds to interrupt the wash program. The word **Start** will appear on the display to show that the washing program has begun.


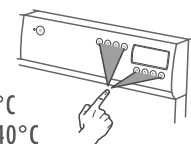


## 5 WHEN PROGRAM IS COMPLETE

The word **Stop** will appear on the display when the wash program is complete. The display is switched off three minutes after the end of the wash program.

Press the key button to open the door. The door will open after 3 seconds. Take out the laundry. Check that the drum is empty and close the door.

Switch off the washing machine

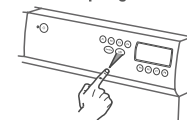

## ERROR MESSAGES

**0000** flashing at the top right: open the door, redistribute the load and run program 8.

### Other messages:

- Write down the error message that is displayed.
- Turn the power switch on the machine off and on again.
- Press the key button and take out the laundry.
- Contact the property management service.

## SAFETY PRECAUTIONS

- Do not use the machine for dry cleaning.
- Only use automatic laundry detergent.
- Children must not use this machine.
- Do not spray the machine with water when cleaning.