


Käyttöohje (1710151)

Kuivausrumpu TALPET IDR 190, IDR 250, IDR 285 ja IDR 345, I 190 ERS

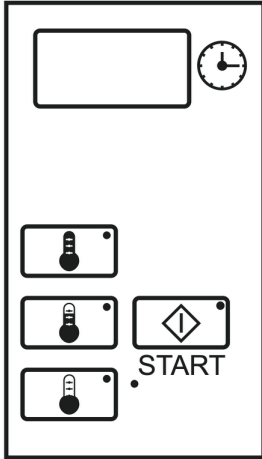

Yleistä

Rumpukuivaus on nopea, helppo ja energiataloudellinen tapa kuivattaa pyykkiä. Pyykin tulee kuitenkin olla lingottua ennen rumpukuivausta. Rumpukuivauksen jälkeen pyykki on pehmeää ja helposti jälkikäsiteltävää. Mankeloitavat pyykkiä kannattaa jättää hieman kosteiksi, tässä kannattaa suosia siihen suunniteltuja jäännöskosteusohjelmia. Villaa ja pellavaa lukuun ottamatta lähes kaikki materiaalit soveltuvat rumpukuivaukseen. Tarkista kuitenkin pesumerkit kuivattavasta pyykistä.

Kuivausrummun käyttäminen on helppoa käyttöpaneelin valintapainikkeilla. Kuivausrumpu on varustettu näytöllä, joka kertoo kuivausohjelman numeron. Kaikissa malleissa on nukkasuodatin, joka on aina puhdistettava huolellisesti ennen koneen käyttöä ja sen jälkeen.

Käyttöpaneelin vasemmalla puolella on keltaisella renkaalla merkitty punainen HÄTÄ-SEIS-painike, jonka painaminen sammuttaa koneen. HÄTÄ-SEIS-painike on tarkoitettu käytettäväksi ainoastaan vaaratilanteissa, eikä sitä tarvita koneen normaalissa käytössä. HÄTÄ-SEIS-painikkeen painamisen jälkeen konetta voidaan käyttää vasta, kun painike on vapautettu vetämällä punaista nuppia.


Kuivausrummussa ei saa kuivattaa pyykkiä, joka on käsitelty tulenaroilla tai myrkyllisillä aineilla. Itsesyttymisvaaran takia kuivia pyykkejä ei saa pitää turhaan rummussa. Kuivausrumpua ei saa pestä juoksevalla vedellä.




Valmistelevat toimet

Kytke virta turvakytkimestä. Avaa alaluukku ja puhdista nukkasuodatin kevyesti harjaamalla. Laita lingottu märkä pyykki oikaistuna ja kuohkeana rumpuun. Sulje täyttöluukku kevyesti painamalla. Rumpuun ei saa laittaa vettä valuvaa pyykkiä. Tarkista pesumerkeistä, että pyykki kestää rumpukuivausta. Älä ylitä enimmäistäyttömääriä:

Malli	Kapasiteetti	Malli	Kapasiteetti	Malli	Kapasiteetti	Malli	Kapasiteetti
IDR 190	9 kg	IDR 250	11 kg	IDR 285	13 kg	IDR 345	16 kg

Ohjelman ja lämpötilan valinta

Voit valita haluamasi ohjelman käyttöpaneelin valintapainikkeilla , kun näytössä on teksti ”SEL”.

Painike	Nro	Ohjelma	Lämpötila (°C)	Kesto enintään (min)
	1	Normaali rumpukuivaus	70 °C	40 min
	2	Normaali rumpukuivaus	60 °C	40 min
	3	Hellävarainen rumpukuivaus	50 °C	40 min

Valitse ohjelma painamalla haluamasi ohjelman valintapainiketta, jonka jälkeen näytössä näkyy valitun ohjelman numero. Käynnistä valitsemasi ohjelma painamalla vihreää START-painiketta.

Ohjelmat ovat automaattiohjelmiä, ja kuivausaika riippuu pyykin määrästä ja sen jäännöskosteudesta.

Voit poistaa pyykkejä kesken kuivauksen avaamalla täyttöluukun. Täyttöluukun sulkemisen jälkeen kuivausrumpu on käynnistettävä uudelleen painamalla START-painiketta.

Voit halutessasi keskeyttää ohjelman painamalla kaksi kertaa START-painiketta. Ensimmäisen painalluksen jälkeen laite ilmoittaa kuivauslämpötilan, ja toisen painalluksen jälkeen ohjelma pysähtyy. Muista avata luukku ohjelman keskeyttämisen jälkeen.

Poista pyykki kuivausrummusta heti ohjelman päätyttyä.

Käytön jälkeen

Avaa alaluukku ja puhdista nukkasuodatin kevyesti harjaamalla. Jätä täyttöluukku auki ja kuivausrumpu siistiin kuntoon seuraavalle käyttäjälle.

Nukkasuodattimen yläpuolella sijaitseva nukkakotelo tulee puhdistaa kolmen kuukauden välein. Avaa kansi, joka on varustettu käsin kierrettävillä pikalukoilla, ja puhdista kotelo. Kiinnitä kansi huolellisesti takaisin paikoilleen puhdistuksen jälkeen.

Turvallisuusohjeita ja varoituksia! ⚠

- Noudata aina tekstiilien pesu- ja kuivausohjeita
- Älä kuivata muovia sisältäviä vaatteita kuivausrummussa
- Älä kuivata kuivausrummussa kemikaaleja tai vahaa sisältäviä tekstiilejä, kuten siivoustekstiilejä tai kotona kemiallisesti pestyjä liuottimia sisältäviä tekstiilejä
- Tulipalovaaran takia älä koskaan käytä kuivausrumpua ilman, että nukkasuodatin on paikoillaan
- Tulipalovaaran takia älä koskaan käytä kuivausrumpua, jos nukkasuodatin on rikkoutunut
- Sähkökatkon sattuessa poista pyykki kuivausrummusta
- Tutustu tämän käyttöohjeen lisäksi kuivausrumpuun kiinnitettyihin ohje- ja varoitustarroihin.

Ongelmatilanteessa

Ilmoita kiinteistöhuoltoon ilmentynyt vika ja ota pyykki koneesta.




Talpet - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi

Operating Manual (1710167)

Tumble dryer TALPET IDR 190, IDR 250, IDR 285 ja IDR 345, I 190 ERS

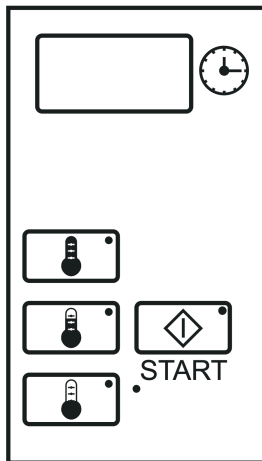

General

Tumble drying is a fast, easy and energy efficient way of drying laundry. The laundry must be spin-dried before tumbling. After tumble drying laundry is soft and easy to be processed further. Laundry intended for ironing or mangling should be left slightly damp. It is advisable to use residual moisture programs designed for this purpose. Apart from wool and linen, nearly all materials are suitable for tumble drying. Despite this, always check the care labels before tumble drying.

Using the tumble dryer is easy with the control panel selection buttons. The dryer is equipped with a display that shows the drying program number. All models have a lint filter, which must always be carefully cleaned before and after using the machine.

On the left side of the control panel, there is a red EMERGENCY STOP button marked with a yellow ring. Pressing this button immediately shuts down the machine. The button is intended for use in emergency situations only and is not needed during normal operation. To restart the machine after using the emergency stop, pull the red button to release it.


Laundry treated with flammable or toxic substances must not be dried in the tumble dryer. Due to the risk of spontaneous combustion, dry laundry must not be left in the drum unnecessarily. The tumble dryer must not be cleaned with running water.




Preparatory Steps

Turn on the safety switch located on the wall. Open the lower hatch and clean the lint filter by gently brushing it. Place the spun, damp laundry into the drum, making sure it is untangled and fluffy. Close the loading door by pressing it gently. Do not place dripping wet laundry into the drum. Check the care labels to ensure the laundry is suitable for tumble drying. Do not exceed the maximum load limits:

Model	Capacity	Model	Capacity	Model	Capacity	Model	Capacity
IDR 190	9 kg	IDR 250	11 kg	IDR 285	13 kg	IDR 345	16 kg

Selecting the drying program and temperature

You can select the desired program using the control panel selection buttons  , when the display shows “SEL”.

Button	Number	Program	Temperature (°C)	Max duration (min)
	1	Normal tumble drying	70 °C	40 min
	2	Normal tumble drying	60 °C	40 min
	3	Delicate tumble drying	50 °C	40 min

Select a program by pressing the button for the desired program. The display will show the number of the selected program. Start the selected program by pressing the green START button.

The programs are automatic, and the drying time depends on the amount of laundry and its residual moisture.

You can remove laundry during the drying cycle by opening the loading door. After closing the door, the dryer must be restarted by pressing the START button.

If desired, you can interrupt the program by pressing the START button twice. After the first press, the dryer will display the drying temperature. After the second press, the program will stop. Remember to open the door after stopping the program.

Remove the laundry from the dryer immediately after the program has finished.

After use

Open the lower hatch and clean the lint filter gently with a brush. Leave the loading door open and ensure the tumble dryer is clean and tidy for the next user.

The lint compartment located above the lint filter should be cleaned every three months. Open the cover, which is equipped with hand-operated quick-release locks, and clean the compartment. Carefully reattach the cover after cleaning.

Safety instructions and warnings

- Always follow the washing and drying instructions for textiles.
- Do not dry clothes containing plastic in the tumble dryer.
- Do not dry textiles containing chemicals or wax in the tumble dryer, such as cleaning cloths or garments that have been dry-cleaned at home using solvents.
- Due to fire risk, never use the tumble dryer without the lint filter in place.
- Due to fire risk, never use the tumble dryer if the lint filter is damaged.
- In case of a power outage, remove the laundry from the tumble dryer.
- In addition to this manual, familiarize yourself with the instruction and warning labels attached to the tumble dryer.

In case of problems

Report any malfunction to property maintenance and remove your laundry from the machine.



Talpet - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi