

Käyttöohje (2010010)

Kuivausrumpu TALPET KR 1301 LP



Yleistä

Rumpukuivaus on nopea, helppo ja energiataloudellinen tapa kuivattaa pyykkiä. Pyykin tulee kuitenkin olla lingottua ennen rumpukuivausta. Rumpukuivauksen jälkeen pyykki on pehmeää ja helposti jälkikäsiteltävää. Mankeloitavat pyykkit kannattaa jättää hieman kosteiksi. Villaa ja pellavaa lukuun ottamatta lähes kaikki materiaalit soveltuvat rumpukuivaukseen. Tarkista kuitenkin pesumerkit kuivattavasta pyykistä. Merkillä varustetut tekstiilit soveltuvat rumpukuivaukseen ja merkillä varustetut tekstiilit eivät sovellu rumpukuivaukseen. Kuivausrummussa ei saa kuivata vaahtomuovia, lasikuitumateriaaleja, kemiallisesti pestyjä tekstiilejä, tulenaroilla tai myrkyllisillä aineilla käsiteltyjä tekstiilejä tai tekstiilejä, joissa on merkintä ”Ei saa kuivata lämmönlähteen lähellä”. Mattojen ja vastaavien kuivaus on kielletty!

Itsesyttymisvaaran takia kuivia pyykkejä ei saa pitää turhaan rummussa. Kuivausrumpua ei saa pestä juoksevalla vedellä.

Kuivausrumpu on varustettu opastavalla näytöllä ja käyttö on helppoa käyttöpaneelin ohjelmanvalitsimella ja painikkeilla.

Kuivausrumpu Talpet KR 1301 on varustettu yhdellä nukkasuodattimella, joka tulee puhdistaa jokaisen kuivauskerran jälkeen tämän ohjeen mukaisesti.

Valmistelevat toimet

Kytke virta seinällä olevasta turvakytkimestä.





Avaa täyttöluukku ja tarkista, että nukkasuodatin on puhdas ja puhdista se tarvittaessa. Laita lingottu pyykki oikaistuna ja kuohkeana rumpuun. Sulje täyttöluukku kevyesti painamalla.

Kytke virta käyttöpaneelin pääverkkokytkimestä.

Mikäli kone on kytketty rahastinlaitteeseen, tutustu myös sen käyttöohjeeseen.

Ohjelman valinta

Valitse pyykille soveltuva ohjelma käyttöpaneelin ohjelmavalitsimella. Valittavanasi on seuraavat vakio-ohjelmilla ja matalalla lämpötilalla toimivat ohjelmat:

<p>Ohjelmat vakio-ohjelmilla Enimmäistäyttö 5-6kg</p> <p>Erittäin kuiva</p> <p>Kaappikuiva</p> <p>Normaalkuiva</p>	<p>Ohjelmat matalalla lämpötilalla aroille tekstiileille Enimmäistäyttö 2-3kg</p> <p>Erittäin kuiva </p> <p>Kaappikuiva </p> <p>Normaalkuiva </p> <p>Silityskuiva </p>
-------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Koneen käynnistäminen

Paina ohjelman valinnan jälkeen **Start**-painiketta. Arvio jäljellä olevasta kuivausajasta näkyy näytössä muutaman minuutin kuluessa kuivausohjelman käynnistymisestä.

Voit keskeyttää ohjelman painamalla **Stop**-painiketta kolmen sekunnin ajan. Lisää tai poista pyykkiä, sulje luukku ja paina **Start**-painiketta. Uusi arvioitu ohjelma-aika näkyy muutaman minuutin kuluttua. Ellet halua käynnistää ohjelmaa uudestaan, ota koko pyykki välittömästi rummusta ja levitä se niin, että lämpö pääsee poistumaan.

Käytön jälkeen

Näytön teksti ”Valmis” ilmaisee, että ohjelma on päättynyt.

LP-malleissa kompressorin jäähdytyspuhallin jatkaa jonkin aikaa käyntiä ohjelman päätyttyä mutta pysähtyy automaattisesti.

Kahden minuutin kuluttua kuivausohjelman päättymisestä näytön ja lisävalintapainikkeiden taustavalaistus kytketty energiansäästötilaan.


Tyhjennä kondenssivesisäiliö jokaisen kuivauskerran jälkeen, mikäli sitä ei ole kytketty viemäriin. Vedä säiliö ulos, tyhjennä vesi ja työnnä säiliö takaisin. Jos kondenssivesisäiliö tulee liian täyteen, ohjelma keskeytyy ja näytössä lukee ilmoitus ”Ylitulviminen”. Tyhjennä säiliö ja aloita uusi ohjelma painamalla **Start**-painiketta.

HUOM! Puhdista täyttöluukun nukkasuodattimet jokaisen kuivauskerran jälkeen ohjeen mukaisesti. Tyhjennä säiliö jokaisen kuivauskerran jälkeen mikäli sitä ei ole kytketty viemäriin.

HUOM! Höyrystimen ja kondenssiveden nukkasuodattimet on puhdistettava, kun koneen näyttö niin osoittaa tai useammin.

Nukkasuodattimen puhdistaminen

Täyttöluukun nukkasuodatin on puhdistettava jokaisen kuivauskerran jälkeen.

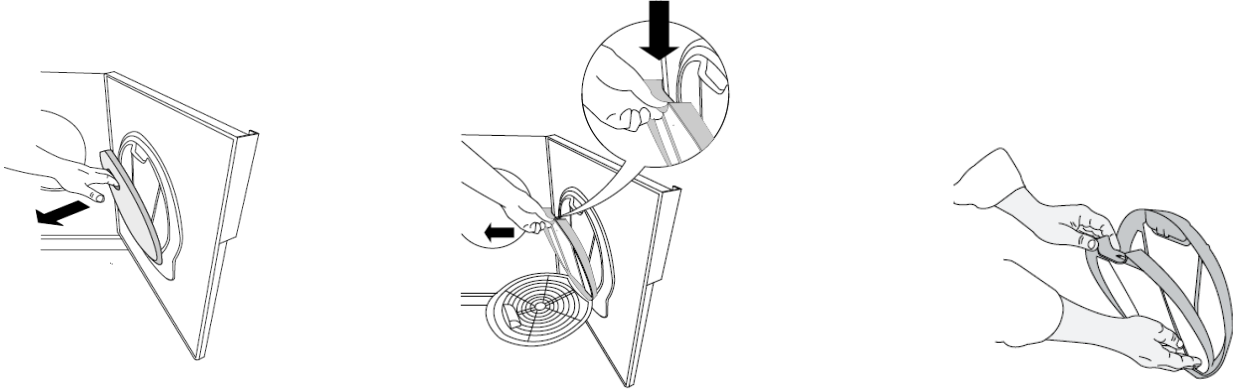

1. Avaa nukkasuodattimen teline.

2. Ota suodatin telineestä ja avaa puhdistamista varten.

3. Poista nukka suodattimen kaikilta reunoilta ja sulje suodatin.

4. Aseta suodatin oikeinpäin telineeseen ja sulje teline ennen täyttöluukun sulkemista.

Turvallisuusohjeita ja varoituksia! ⚠

- Jos nukkasuodatin tukkeutuu, koneen automaattinen ylikuumentumissuoja saattaa laua. Puhdista nukkasuodatin, ja anna koneen jäähtyä n. 30 minuuttia ennen kuin käynnistät sen uudelleen.
- Kuivauksen päättyttyä katkaise virta pääkytkimestä. Poista pyykki rummusta ja sulje luukku.

Ongelmatilanteessa


Ilmoita kiinteistöhuoltoon ilmentynyt vika ja ota pyykki koneesta.



Talpet - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi

Operating instructions (1301-10) Tumble dryer **TALPET KR 1301 LP**

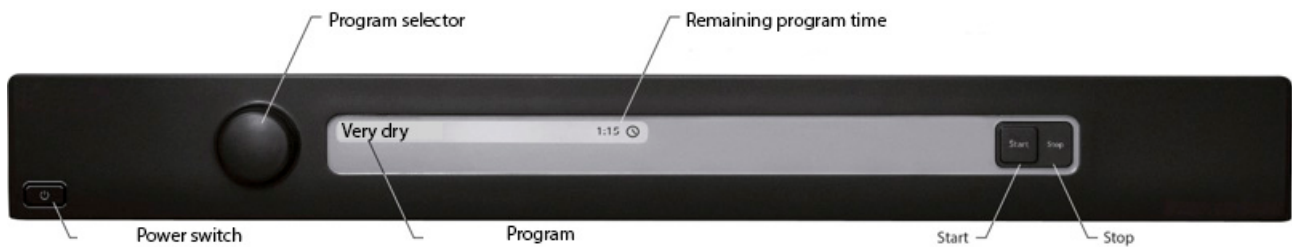

General


Tumble drying is a fast, easy and energy efficient way of drying laundry. However, the laundry must be spin-dried before tumble drying. After tumble drying laundry is soft and easy to be processed further. If the laundry is to be wringed, it is a good idea to leave it slightly damp. With the exception of wool and linen, nearly all materials are suitable for tumble drying. In spite of this, always check the care labels before tumble drying.


The program and temperature selectors in the control panel make the tumble dryer easy to use. Talpet KR 1301 LP tumble dryer is equipped with three lint filters which have to be cleaned after every use (see instructions in appendix 1).

Maximum load for regular laundry is 6 kg and for delicate items max 4 kg.

Before using the tumble dryer

Laundry must first be spin-dried (spin speed 1000 r/min or higher). Higher spin speed saves energy and shortens the drying time.

All materials with the symbol  are suitable to be tumble dried. Best suitable are cotton fabrics, terry and synthetic fibers.

Materials not suited for tumble drying are marked with the symbol . Some materials can melt or cause a fire hazard when they are heated up, others may lose their shape or shrink.

Do not tumble dry materials marked with: “Do not dry near heat.” Also clothes that have been chemically washed at home, or that contain foam plastic or fiberglass materials must not be tumble dried. Wool should also not be tumble dried because it may become felted.


DO NOT DRY CARPETS OR SIMILAR ITEMS IN THIS MACHINE!


If the dryer is connected to a vending machine, read also its instructions.


First sort the garments to be dried. The drying result is smoothest when all the garments are of the same material. Close zippers and buttons, tie waistbands and check that you have the proper amount of clothes to be dried, and that you are using the correct temperature. Switch the dryer on by pressing the power switch. Open the machine door, place laundry in the dryer, and close the door.

Selecting a program and starting the machine

The following presents recommendations for drying programs. More sensitive textiles require a low temperature.

Very dry  requires a normal/low temperature. This program is for slowly drying textiles (for example jeans with very thick seams).

Closet dry  program also uses a normal/low temperature. These programs turn off the heating when the laundry is dry, but not yet overtly dry. The program “closet dry” turns the heat off slightly later than “normal dry.” Try different programs to find the one best suited for your use. Use these programs when you want the laundry to be completely dry.

Normal dry  requires a normal/low temperature. These programs turn off the heating when the laundry is dry, but not yet overtly dry

Iron dry program turns the heat off when the laundry is suitably dry to be ironed or wringed.


Press the Start button after selecting the program. A few minutes after the program has started, the display indicates an estimate of the remaining drying time. The actual remaining time may be longer than the time displayed. In this case, the remaining time is displayed as “0:15” until the desired dryness level has been achieved.

If you wish to cancel or change the program, hold the Stop button down for three seconds. To add or reduce the amount of laundry after the program has started, the dryer can be stopped by opening the door. Add/reduce laundry, close the door and press Start. The new estimated program time is displayed in a few minutes. If you do not wish to restart the program, remove all laundry immediately from the dryer and spread it so that it will cool down.


After using the dryer

The display indicates “Ready” when the program has finished. LP models have a compressor cooling fan that will run for a while after the program has finished. It will shut down automatically. Two minutes after the program has finished, the lights for the display and selector buttons switch to energy conservation mode. Empty the condensed water container after every use if it is not connected to the drain. Pull the container out, empty the water and push the container back in. If the container is too full, the program pauses and the display indicates “overflow.” Empty the container and start a new program by pressing the Start button.


NOTE! Empty the lint filters on the dryer door after every use according to the instructions. Empty the container after every use if it is not connected to the drain.

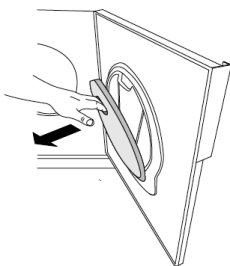

1. Open the lint filter holder.

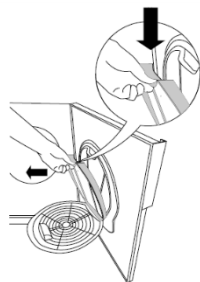

2. Remove the filter from the holder and open it for cleaning.

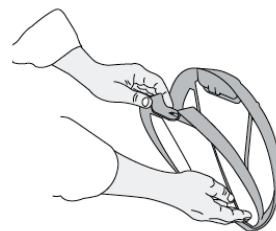

3. Remove lint from all edges of the filter. Dry carefully.

4. Close the filter. Place it in the holder correctly. Close the holder before closing the dryer door.

NOTE! The lint filters in the vaporizer and the condensed water container have to be cleaned when the dryer display so indicates, or more often.

Safety instructions and warnings

- If the lint filter gets blocked, the automatic overheat protection may go off. Clean the lint filter and let the machine cool down for approximately 30 minutes before restarting.
- After the program has finished, turn the power off from the main power switch. Remove laundry from the dryer and close the door.

In case of problems

Notify the house janitorial service of malfunction and remove laundry from the machine.



TALOPESULAT OY

Vitikka 1 C Puh. (09) 6869 750 info@talpet.fi
02630 ESPOO Fax (09) 6869 7520 www.talpet.fi