


## Käyttöohje (2000403)

### Kuivausrumpu TALPET KR 2000 MP

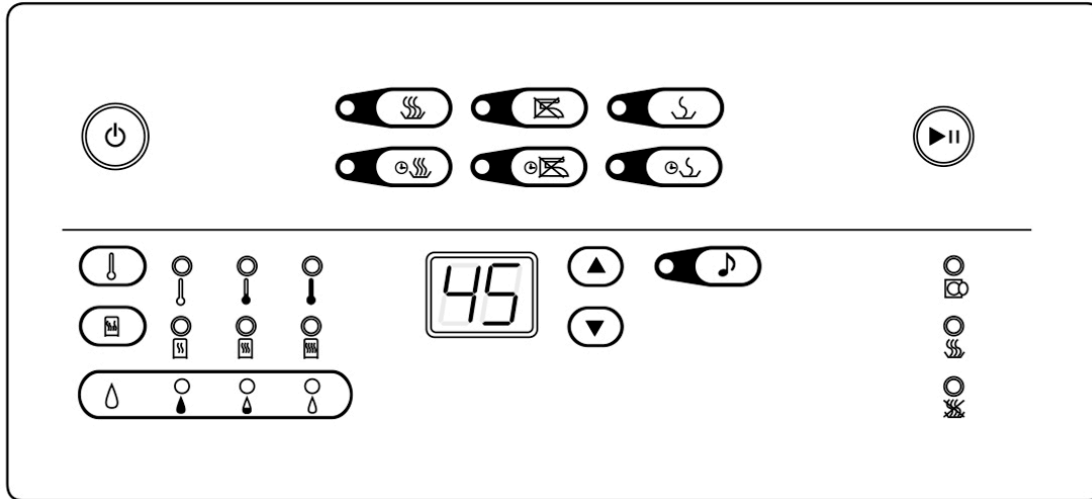

#### Yleistä


Rumpukuivaus on nopea, helppo ja energiataloudellinen tapa kuivattaa pyykkiä. Pyykin tulee kuitenkin olla lingottua ennen rumpukuivausta. Rumpukuivauksen jälkeen pyykki on pehmeää ja helposti jälkikäsiteltävää. Mankeloitavat pyykkiä kannattaa jättää hieman kosteiksi. Villa ja pellavaa lukuun ottamatta lähes kaikki materiaalit soveltuvat rumpukuivaukseen. Tarkista kuitenkin pesumerkit kuivattavasta pyykistä.

Kuivausrummun käyttöpaneelissa on kuivausohjelman arvioidun keston osoittava näyttö, koneen toiminnoista kertovat merkkivalot, kuivausohjelmien lämpötilan valintanäppäimet sekä käynnistysnäppäin. Kuivausrumpu on varustettu nukkasuodattimella, joka on aina puhdistettava huolellisesti ennen koneen käyttöä ja sen jälkeen. Täyttöluukun alareunaan sijoitettu nukkasuodatin on helposti puhdistettavissa täyttöluukun ollessa auki.

Kertatäyttö valko- ja kirjopyykille on enintään 8–10 kg ja hienopyykille enintään 4–5 kg.

Kuivausrummussa ei saa kuivattaa pyykkiä, joka on käsitelty tulenaroilla tai myrkyllisillä aineilla. Itsesyttymisvaaran takia kuivia pyykkejä ei saa pitää turhaan rummussa. Kuivausrumpua ei saa pestä juoksevalla vedellä.

#### Valmistelevat toimet

Kytke virta virtanäppäimestä . Avaa täyttöluukku ja puhdista nukkasuodattimet. Laita lingottu märkä pyykki oikaistuna ja kuohkeana rumpuun. Sulje täyttöluukku kevyesti painamalla.

## Kuivausohjelman ja lämpötilan valinta

Valittavana on jäännöskosteuteen tai kuivausaikaan perustuvia ohjelmia. Jäännöskosteuteen perustuvissa ohjelmissa valitaan pyykin laadun mukainen ohjelma ja haluttu jäännöskosteus. Aikaohjelmia käytettäessä valitaan pyykin laadun mukaisen ohjelman lisäksi kuivauslämpötila. Kaikkiin ohjelmiin sisältyy rypistymistä estävä jälkijähdytys. Valitse pyykille sopiva kuivausohjelma ohjauspaneelin näppäimiä käyttäen seuraavasti.

### Jäännöskosteuteen perustuvat ohjelmat

Valitse ohjelma pyykin laadun mukaisesti ylimmän rivin näppäimillä



NORMAALI

SILIÄVÄT

HIENO

Valitse jäännöskosteus -näppäimellä



SILITYSKUIVA

Silitettävä ja mankeloitava pyykki



KUIVA

Normaali pyykki



KAAPPIKUIVA

Suosittelaaan paksumille materiaaleille

Käyttöpaneelin näyttö kertoo arvioitun kuivausajan.

Jäännöskosteuden merkkivalot kertovat ohjelman etenemisestä.



### Kuivausaikaan perustuvat ohjelmat

Valitse ohjelma pyykin laadun mukaisesti



NORMAALI

SILIÄVÄT

HIENO

Valitse kuivauslämpötila -näppäimellä



VIILEÄ




LÄMMIN




KUUMA


Käyttöpaneelin näyttö kertoo arvioitun kuivausajan, jota voit tarvittaessa pidentää tai lyhentää nuolinäppäimillä.





### Äänimerkin aktivointi:

Ohjelman päättymisestä kertovan äänimerkin voi aktivoida ja sen voimakkuutta säätää  -näppäimellä.


### Koneen käynnistäminen ja ohjelman eteneminen

Käynnistä kuivausrumpu painamalla  -näppäintä.

Voit lisätä tai poistaa pyykkejä kesken kuivauksen keskeyttämällä ohjelman painamalla  -näppäimestä. Näytössä oleva teksti ”St” ilmoittaa ohjelman keskeytyksestä ja täyttöluukun ollessa avoinna näyttöön tulee teksti ”do”. Luukun sulkemisen jälkeen ohjelma jatkuu painamalla  -näppäintä.

Jäännöskosteuteen perustuva ohjelma päättyy automaattisesti, kun valittu jäännöskosteus on saavutettu ja aikaan perustuva ohjelma päättyy kun kuivausaika on kulunut loppuun.

Jäännöskosteuteen perustuva ohjelma etenee kunnes näytössä on jäljellä arvioituna kuivausaikana 10 min, eikä ohjelma etene jälkijäähdytysvaiheeseen ennen kuin valittu jäännöskosteus on saavutettu.

Käynnissä olevan ohjelman voi lopettaa painamalla  -näppäintä.

Mikäli kuivausrumpu on varustettu rahastimella, suorita maksu ennen koneen käynnistämistä.

### Käytön jälkeen

Jätä täyttöluukku auki, puhdista suodattimet ja jätä kuivausrumpu siistiin kuntoon seuraavalle käyttäjälle.

### Turvallisuusohjeita ja varoituksia


- Kaikista kuivausrummun toiminnassa havaituista vioista on heti ilmoitettava kiinteistöhuoltoon tai isännöitsijälle ja kuivausrummun käyttö on lopetettava välittömästi.
- Älä päästä lapsia kuivausrummun lähelle sitä käytettäessä, äläkä jätä lapsia ilman valvontaa pesulaan tai kuivaushuoneeseen.
- Kuivausrumpua ei saa pestä juoksevalla vedellä.
- Kuivausrummussa ei saa kuivattaa pyykkiä, jota on käsitelty tulenaroilla tai myrkyllisillä aineilla.
- Sähköturvallisuusmääräysten mukaan sähkölaitteen saa asentaa, huoltaa ja korjata ainoastaan sähköalan töihin pätevä henkilö.
- Tulipalon sattuessa kuivausrummun voi sammuttaa sähkölaitteiden sammuttamiseen soveltuvalla sammuttimella.



## Operating Manual

(1710163)

### Tumble-dryer TALPET KR 2000 MP

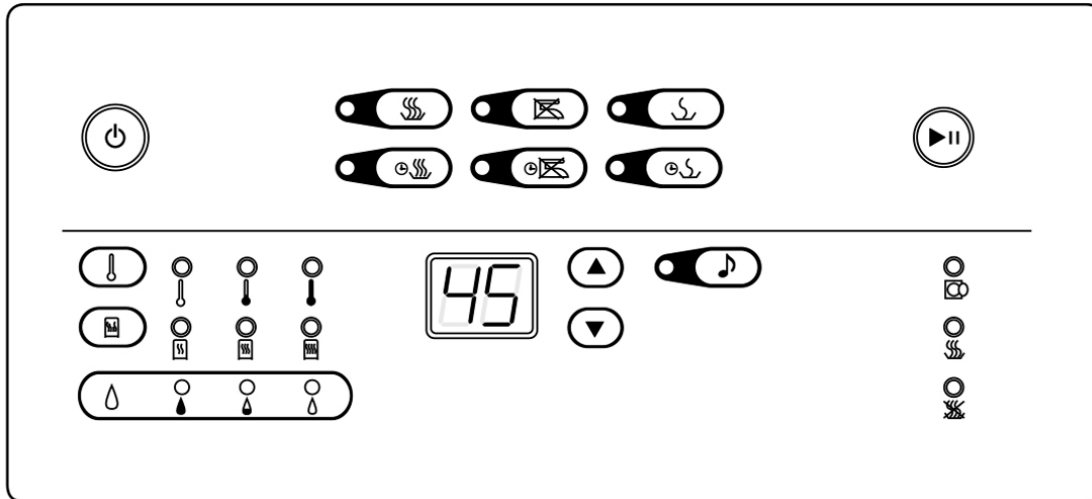

#### General


Tumble-drying is quick, easy and economical way to dry laundry. The laundry must be spin-dried before tumbling. After tumbling the laundry is soft and easy to handle. It is recommended to leave garments that need to be mangled a little wet. Almost all materials, except wool and linen, can be tumble-dried. Also check the washing instructions of the garments.

The control panel of the tumble dryer includes a display showing the estimated duration of the drying program, indicator lights for the machine's functions, temperature selection buttons for the drying programs, and a start button. The tumble dryer is equipped with a lint filter that must always be carefully cleaned before and after each use. The lint filter located at the bottom edge of the loading door is easy to clean when the door is open.

The maximum load per cycle is 8–10 kg for white and colored laundry, and 4–5 kg for delicate laundry.

Laundry treated with flammable or toxic substances must not be dried in the tumble dryer. Due to the risk of spontaneous combustion, dry laundry must not be left in the drum unnecessarily. The tumble dryer must not be cleaned with running water.

#### Preparatory steps

Switch on the power using the power button.  Open the loading door and clean the lint filter. Place the spun damp laundry into the drum, straightened and fluffed. Close the loading door by pressing it gently.

## Selecting the drying program and temperature



You can choose between programs based on residual moisture or drying time. For programs based on residual moisture, select the program that matches the type of laundry and the desired level of residual moisture. When using time-based programs, in addition to selecting the appropriate program for the laundry type, you must also select the drying temperature. All programs include a cool-down phase to prevent wrinkling. Select the appropriate drying program for your laundry using the control panel buttons as follows.

### Programs based on Residual Moisture

Select the program according to the type of laundry using the top row of buttons:



Press the button to select residual moisture.



The display on the control panel shows the estimated drying time. The residual moisture indicator lights show the progress of the program.

### Programs Based on Drying Time

Select the program according to the type of laundry:



Select the drying temperature by pressing the button.




The control panel display shows the estimated drying time, which can be adjusted using the arrow buttons if needed.





## Activation of Sound Signal

The sound signal indicating the end of the program can be activated and its volume adjusted using the  button.

## Starting the Dryer and Program Progress

Start the tumble dryer by pressing the start button. 

You can add or remove laundry during the drying process by pausing the program by pressing the  button. The text “St” on the display indicates the program is paused, and if the loading door is open, the display shows “do”. Once the door is closed, the program resumes by pressing the  button.

A residual moisture-based program ends automatically when the selected moisture level is reached, and a time-based program ends when the set drying time has elapsed.

A residual moisture-based program continues until the estimated drying time shows 10 minutes remaining on the display and does not proceed to the cool-down phase until the selected residual moisture level is reached.

You can stop a running program by pressing the  button.

If the tumble dryer is equipped with a payment system, complete the payment before starting the machine.

## After Use

Leave the loading door open, clean the filter, and leave the tumble dryer tidy for the next user.

## Safety Instructions and Warnings

- Any malfunctions observed during the operation of the tumble dryer must be reported to property maintenance or the building manager, and use of the tumble dryer must be stopped immediately.
- Do not allow children near the tumble dryer while it is in use, and never leave children unsupervised in the laundry room or drying room.
- The tumble dryer must not be cleaned with running water.
- Do not dry laundry in the tumble dryer that has been treated with flammable or toxic substances.
- According to electrical safety regulations, only a qualified professional with appropriate electrical certification is allowed to install, service, or repair electrical appliances.
- In case of fire, the tumble dryer can be extinguished using a fire extinguisher suitable for electrical fires.



**Talpet** - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi