


# Pesuohje




## 1 Valitse ohjelma kääntämällä valitsinta

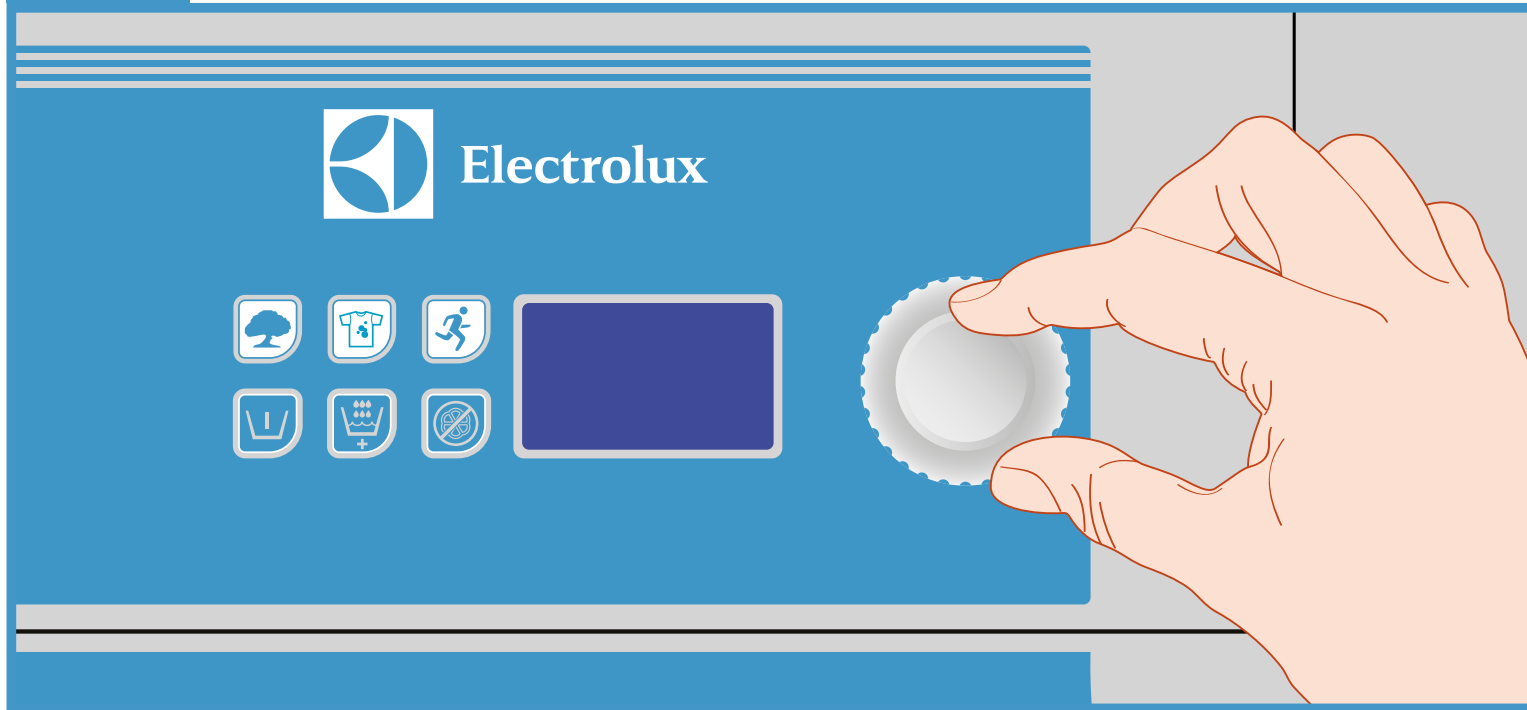

## Pesuohjelma


				<b>Normaali</b>	Valko- ja kirjopesu / Normaali pesu Normaali käyttö - Pitkä linkous (lyhyempi kuivausaika)
				<b>Hellävarainen</b>	Hellävarainen pesu Lyhyt linkous
	<b>Allergiaohjelma</b>			<b>Käsinpesu 30°</b>	Näissä ohjelmissa koneen saa täyttää vain puolilleen
				<b>Villa</b>	
	<b>Rummun huuhtelu</b> huuhtelee rummun ja pesuainesaaliön		<b>Huuhtelu</b>		Yksi huuhtelu, jota seuraa lyhyt linkous

## 2 Valitse lisävalinta tarvittaessa

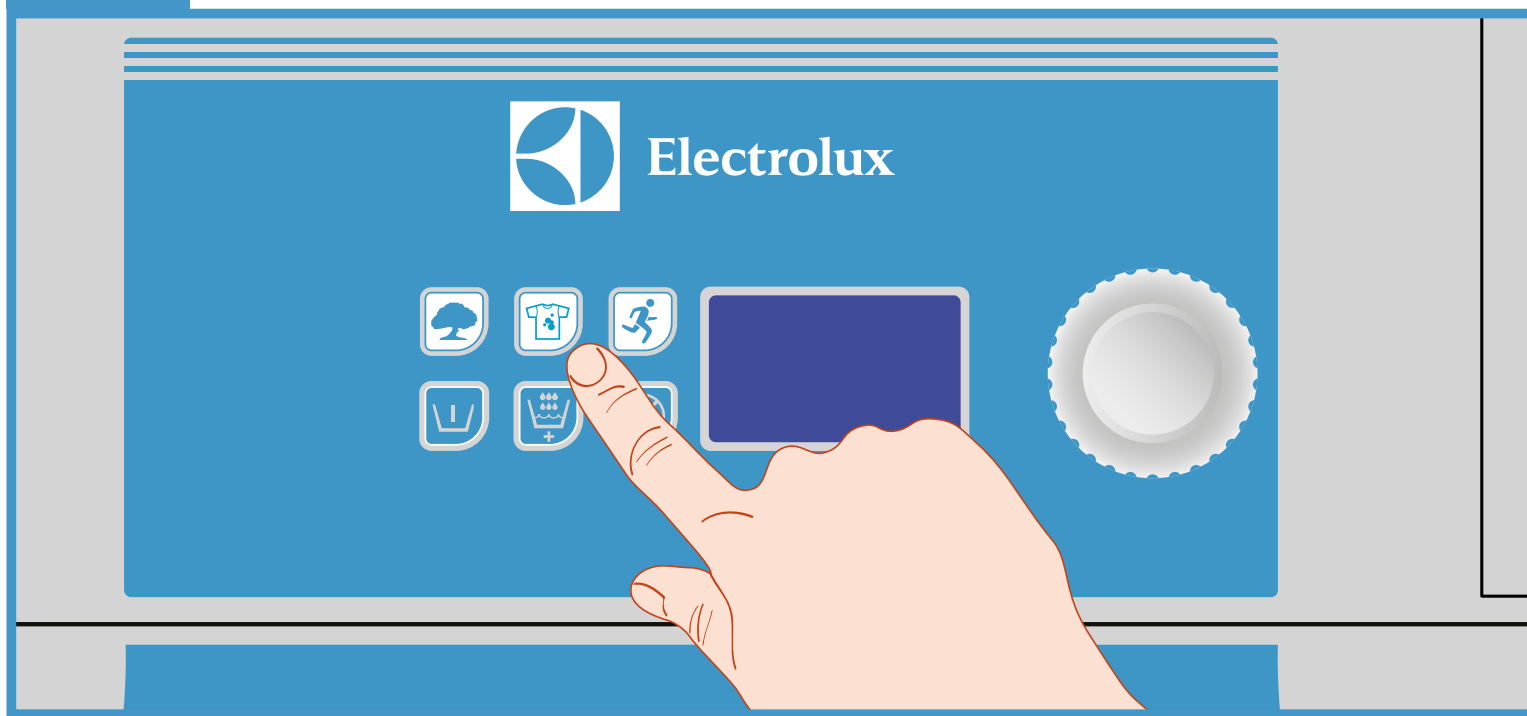

## Annostelu


Annostele pesuaine pesuainepakkauksen ohjeiden mukaan.

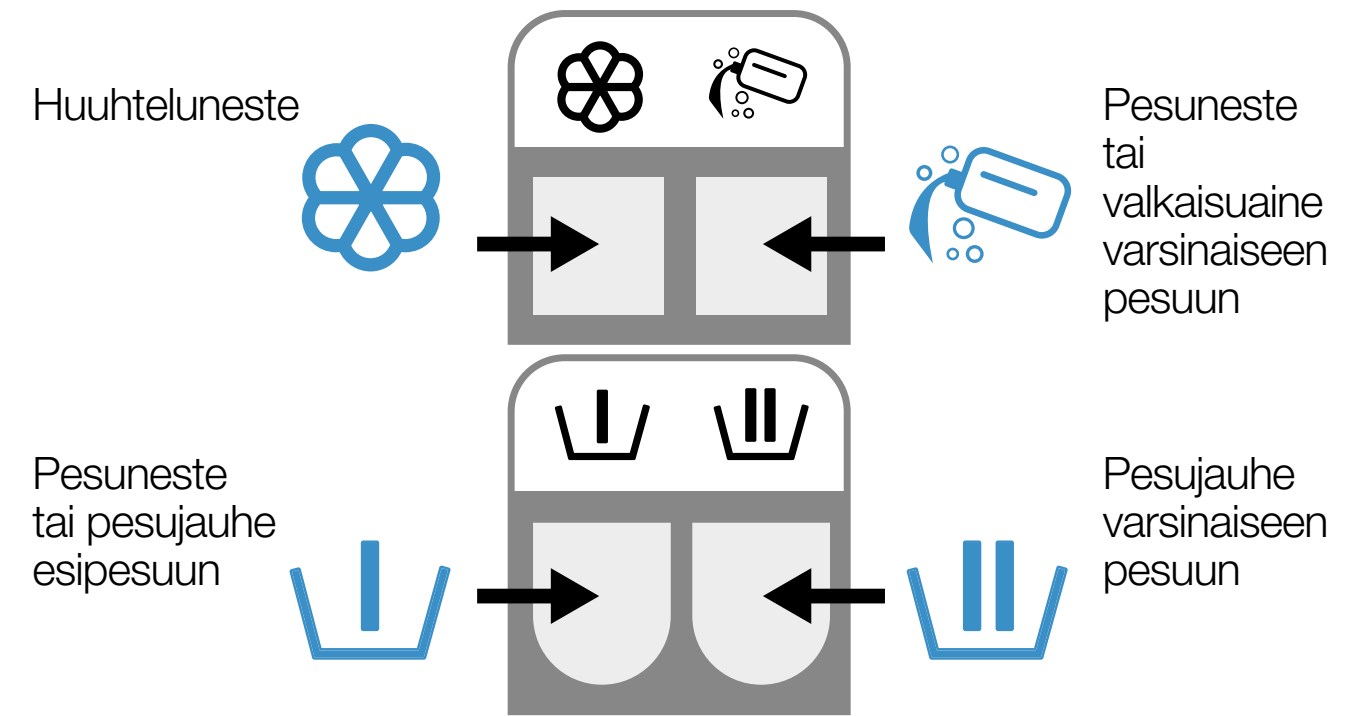

## Lisävalinnat

	<b>Ekologinen</b> pesee pienemmällä vesi- ja energiamäärällä ympäristöystävällinen pesu normaaliikaisille vaatteille		<b>Erittäin likainen pyykki</b> pitkä pesuaika erittäin likaisille tekstiileille		<b>Pikapesu</b> ohjelma pesee mahdollisimman nopeasti lyhyt pesuaika vähän likaisille tekstiileille		<b>Esipesu</b> ohjelmaan lisätään esipesu		<b>Ylimääräinen huuhtelu</b> ohjelmaan lisätään huuhtelu		<b>1 painallus</b> ei huuhteluainetta
									<b>2 painallusta</b> ei pesu- ja huuhteluaineen automaattista annostelua		

## 3 Paina sitten valitsinta

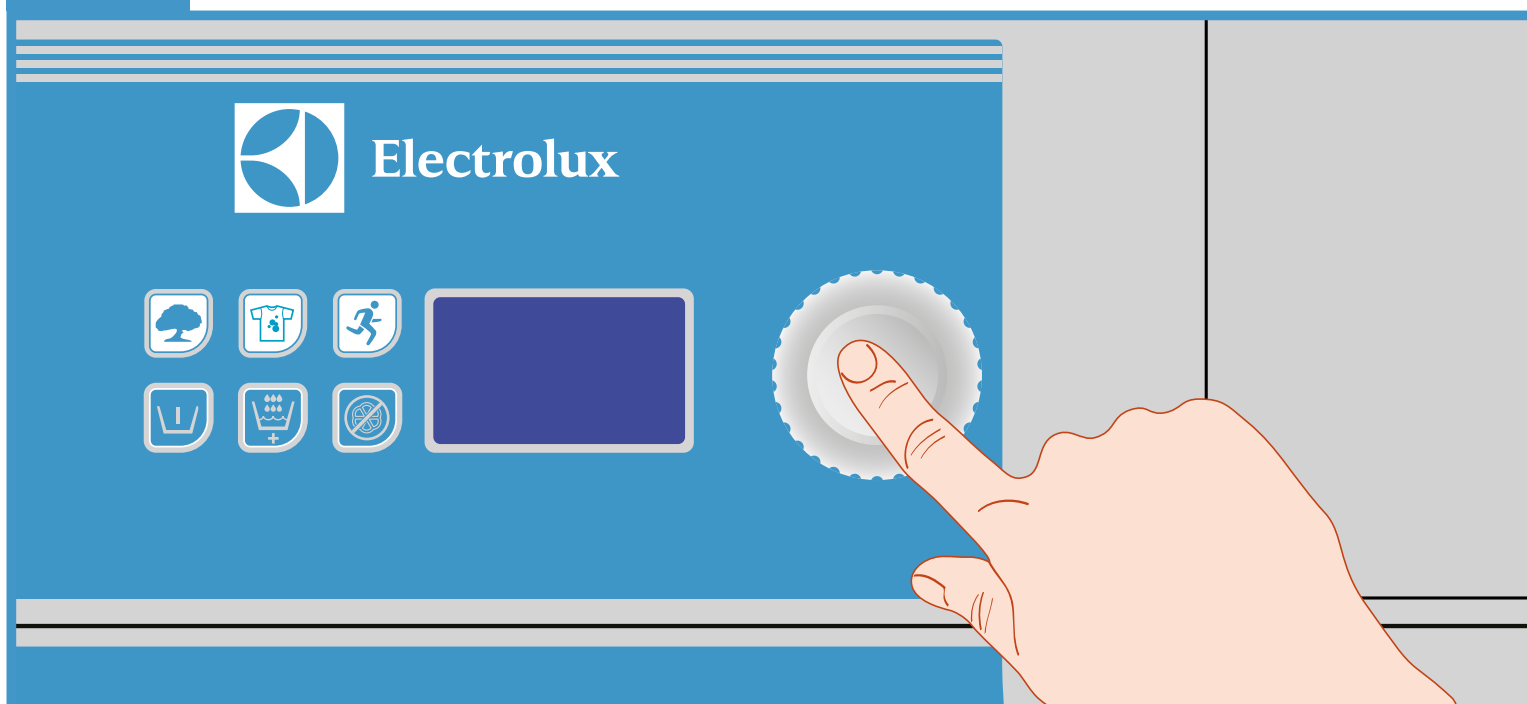

## Pyykin punnitus alkaa...

Käynnistyksen jälkeen kone punnitsee pyykin linkouksen avulla. Tämän jälkeen pesuprosessi

mukautetaan automaattisesti pyykkimäärään. Kone ottaa parhaan mahdollisen vesimäärän saavuttaakseen parhaan pesutuloksen.

\* Tieteellisesti testattu laboratoriotestein

## Jos haluat pysäyttää ohjelman

Paina valitsinta. Näytölle ilmestyy valikko, jossa TAUKO on korostettuna. Paina valitsinta uudelleen, jolloin pesuohjelma

pysähtyy. Luukku voidaan avata hetken kuluttua, ellei veden taso ole liian korkealla. Pesuohjelma jatkuu, kun suljet luukun ja painat valitsinta.

## Kun pesuohjelma on päättynyt:

Jätä luukku auki.  
Puhdista pesuainelokero, jätä pesuainelokeron kansi auki.


## Kun teksti "HUOLTO" näkyy

Tiedota asiasta huoltovastaavalle.

Konetta voidaan edelleen käyttää.




Apartment House Laundry

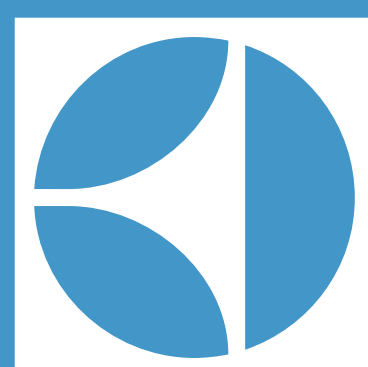

# Washer instructions




## 1 Turn the knob to select a program

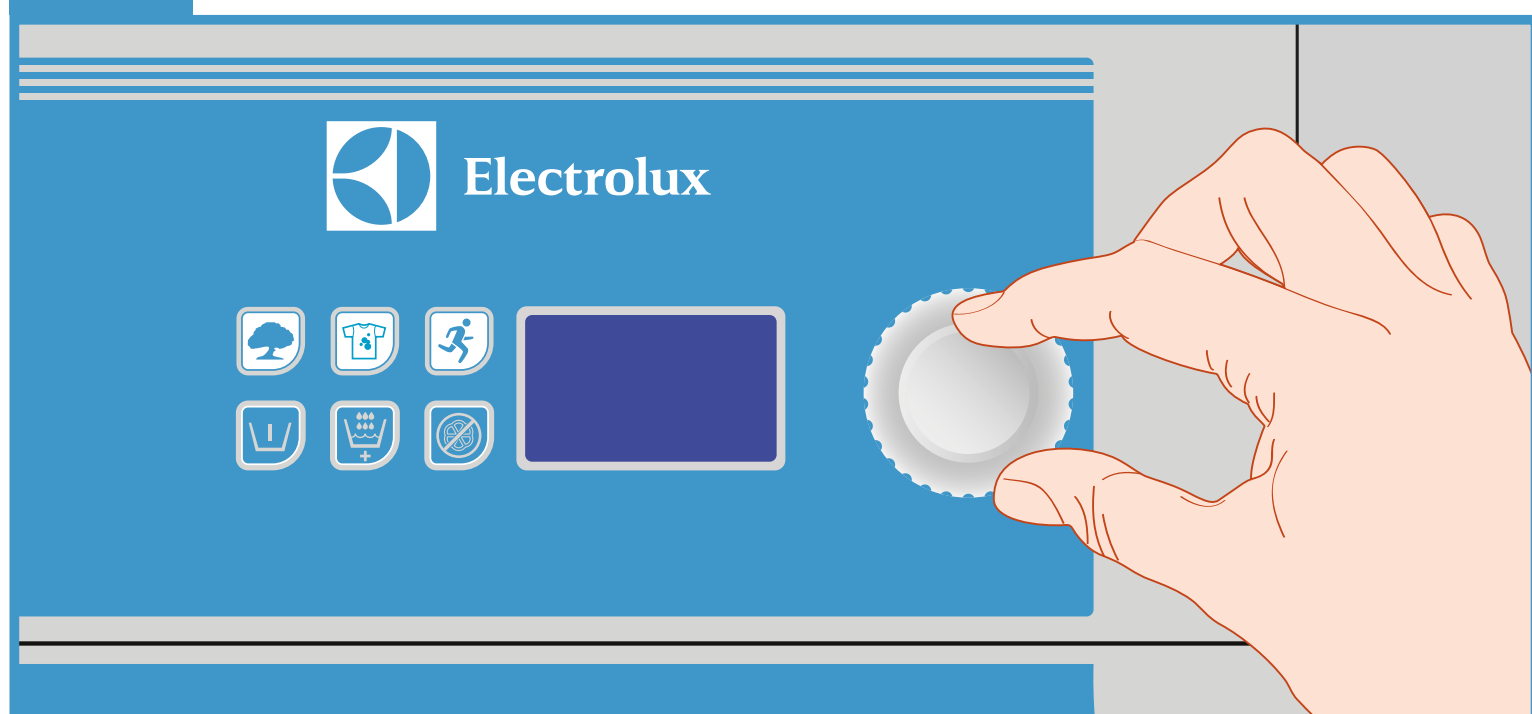

### Wash program


				<b>Normal</b>	whites and coloureds / normal wash / normal cycle / long spin (shorter drying time)
				<b>Mild</b>	Delicates cycle Short spin
	<b>Allergy program</b>			<b>Hand wash 30°</b>	For these programs, the machine should be only half full
				<b>Wool</b>	
	<b>Drum rinse</b>		<b>Rinse program</b>		One rinse followed by a short spin
	Rinses the drum and flushes the detergent box				

## 2 Select an option as needed

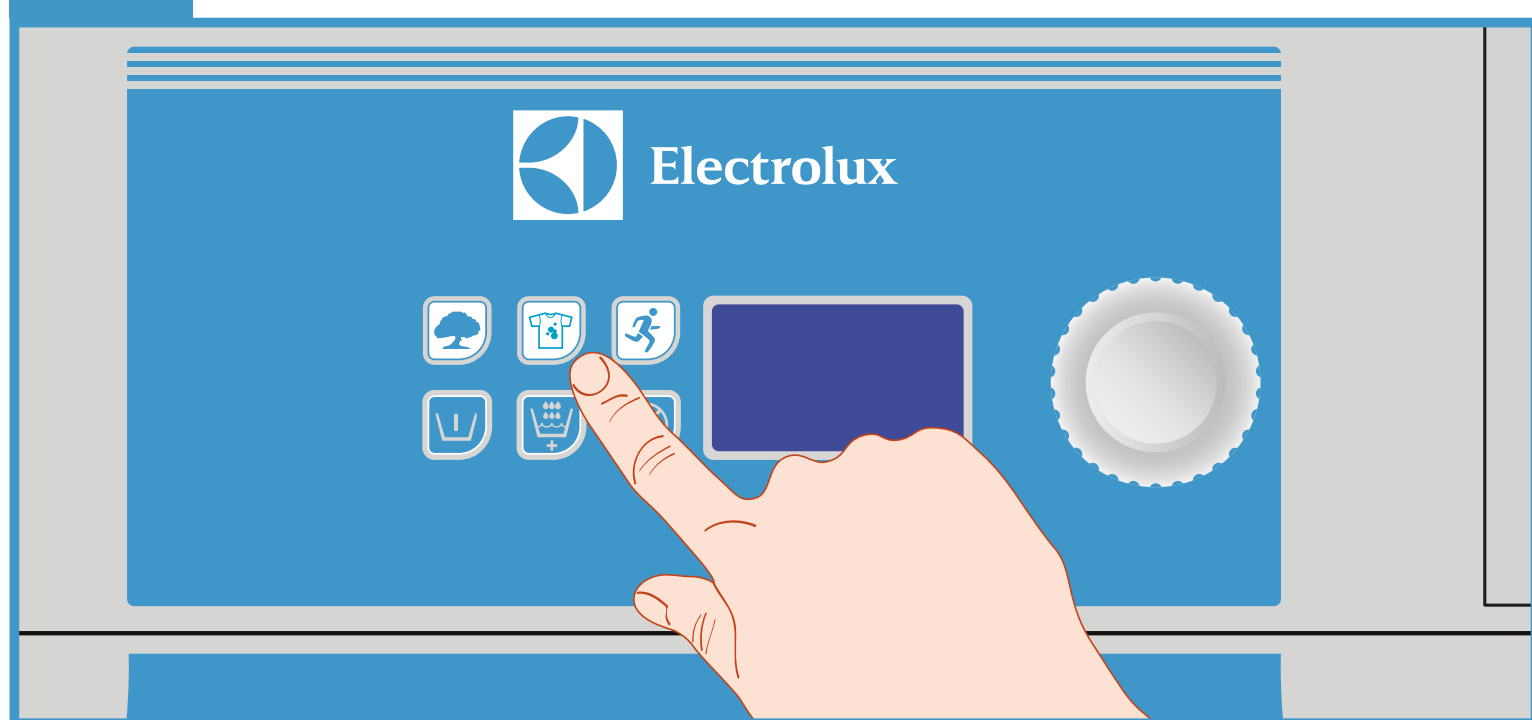

### Dosage


Dispense the detergent according to the instructions on the detergent package

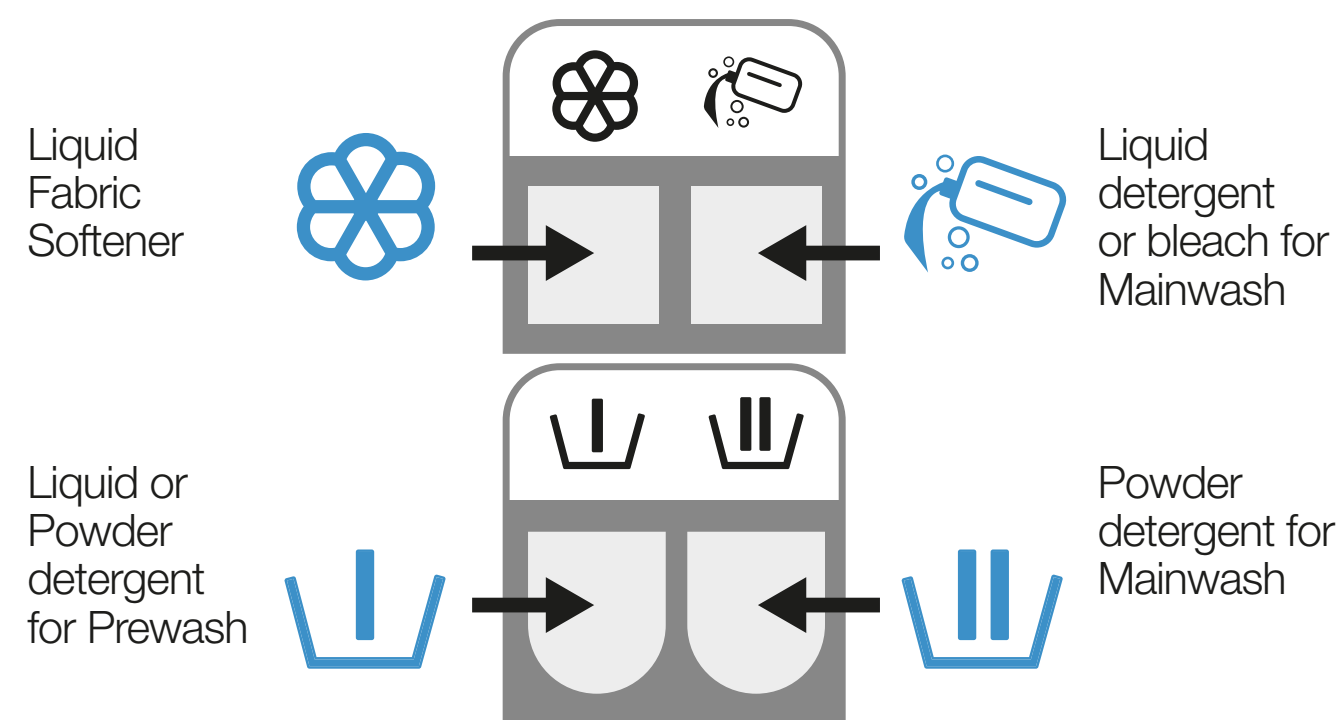

### Options

	<b>Eco</b> for normally soiled clothes, environmentally friendly wash		<b>Heavy soil</b> for heavily soiled textiles, long wash time		<b>Quick wash</b> for lightly soiled textiles, short wash time		<b>Prewash</b> one prewash added		<b>Extra rinse</b> one rinse added		<b>Press once</b> no softener <b>Press twice</b> no automatic dispensing of detergent or softener
--	--	--	--	--	---	--	-------------------------------------	--	---------------------------------------	--	--

## 3 Press the knob to start

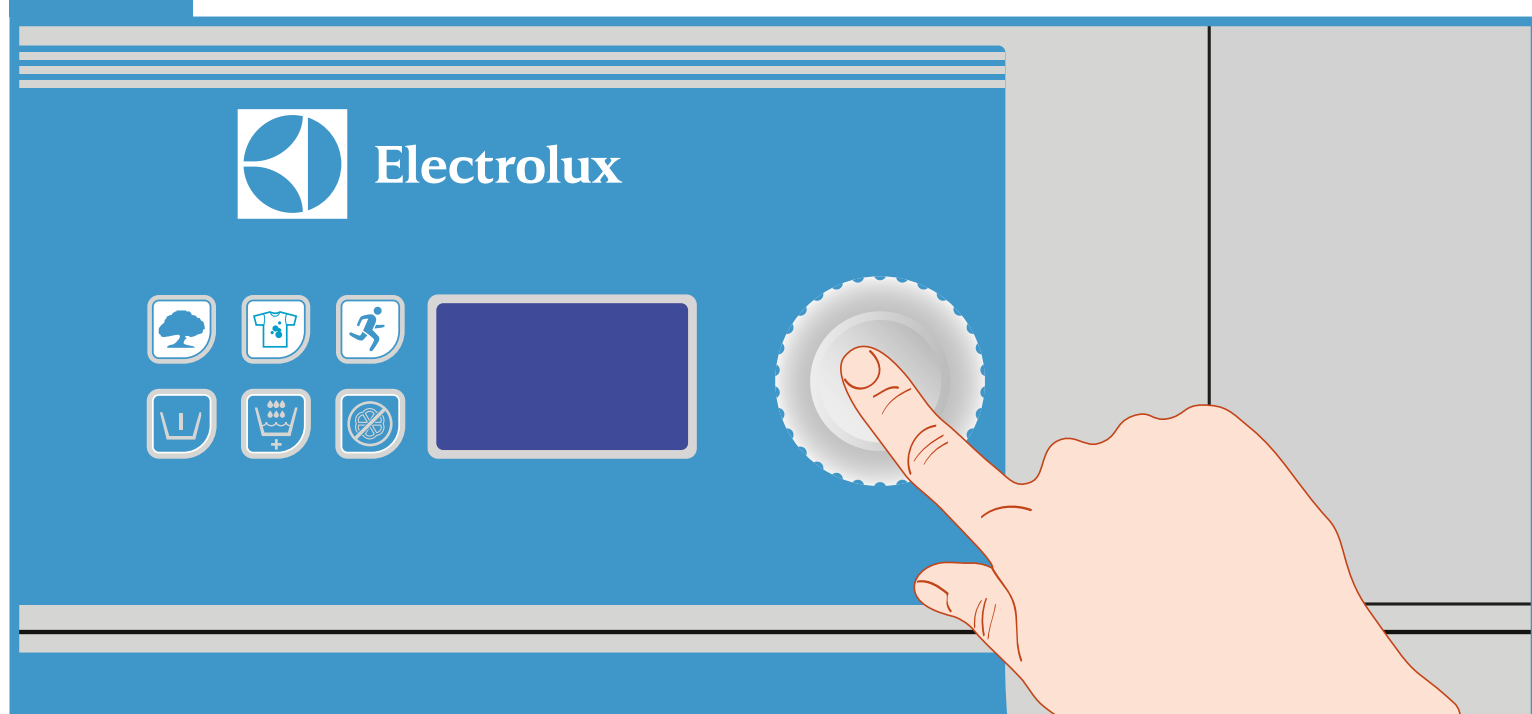

### Weighing of the wash load starts

Once started, the machine analyses the wash load using the spin function

The washing process is then automatically adjusted to the weight of the wash load

### If you need to pause the program

Press the knob. A menu with PAUSE highlighted will be shown on the display. Press again to pause the wash program.

The door can be opened after a while unless the water level is too high. Close the door and press the knob to continue the wash program.

### Once you have finished washing

Leave the door open.  
Clean the detergent compartment, leave the cover of the detergent box open.

### When "maintenance" is displayed

Inform the person in charge of maintenance.

The machine can still be used



Apartment House Laundry

