


# Pesukoneen ohje



AHL mallit

## 1 Valitse ohjelma kääntämällä valitsinta

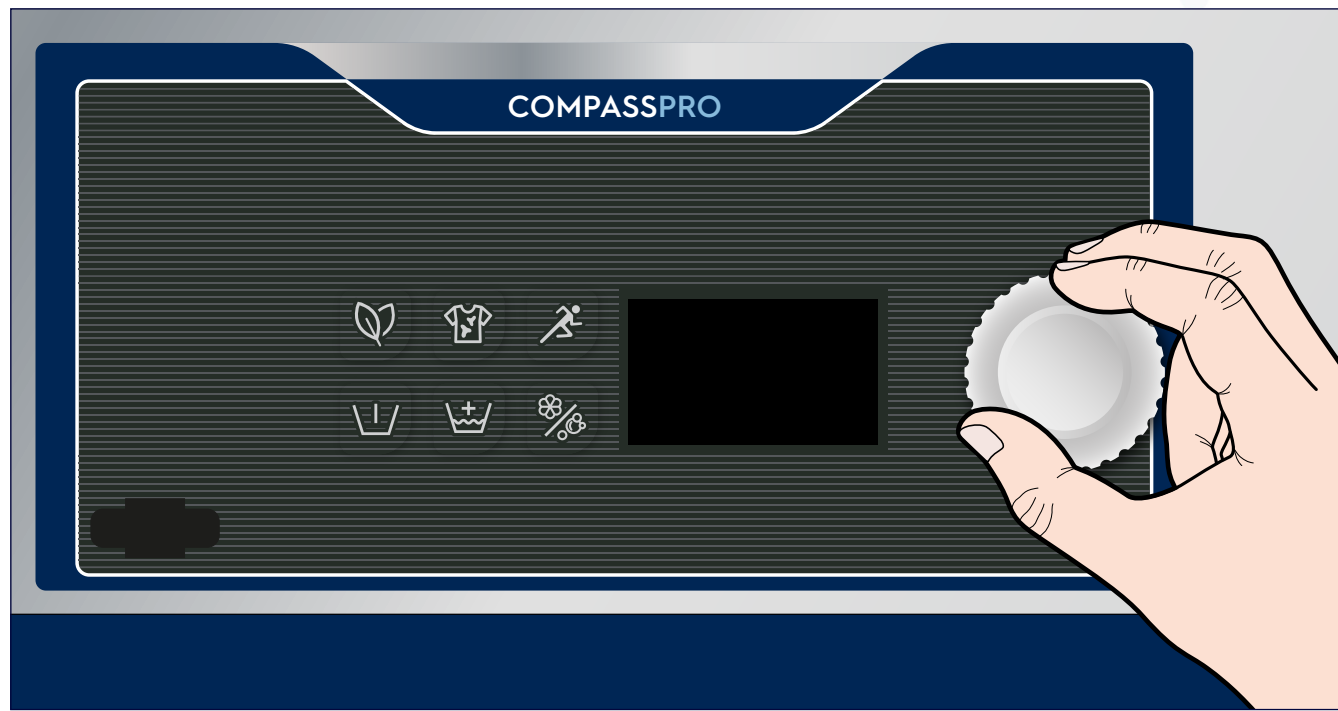

### Pesuohjelma



Hellävarainen



Global desinfiointi


### Normaali

Valko- ja kirjopesu / Normaali pesu  
Normaali käyttö - Pitkä linkous (lyhyempi kuivausaika)

Hellävarainen pesu  
Lyhyt linkous


Näissä ohjelmissa koneen saa täyttää vain puolilleen

## 2 Valitse lisävalinta tarvittaessa

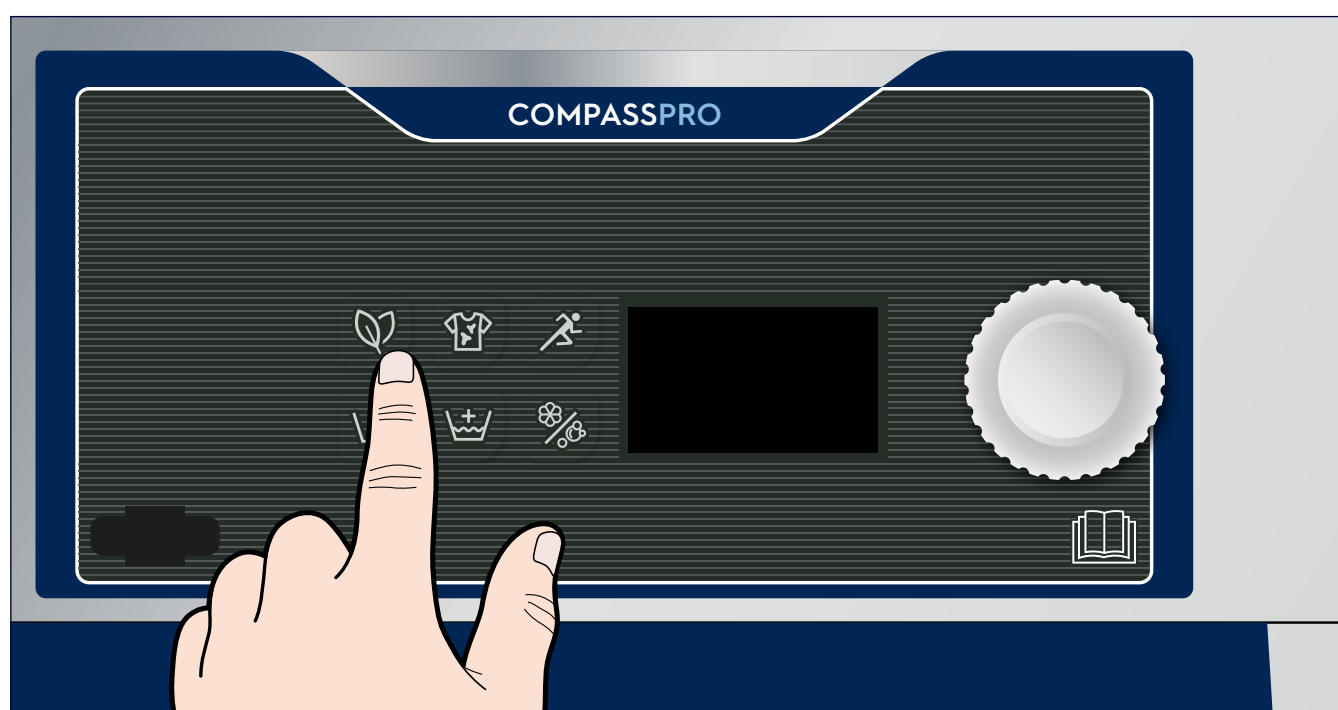

### Annostelu

Annostele pesuaine pesuaine-pakkauksen ohjeiden mukaan.

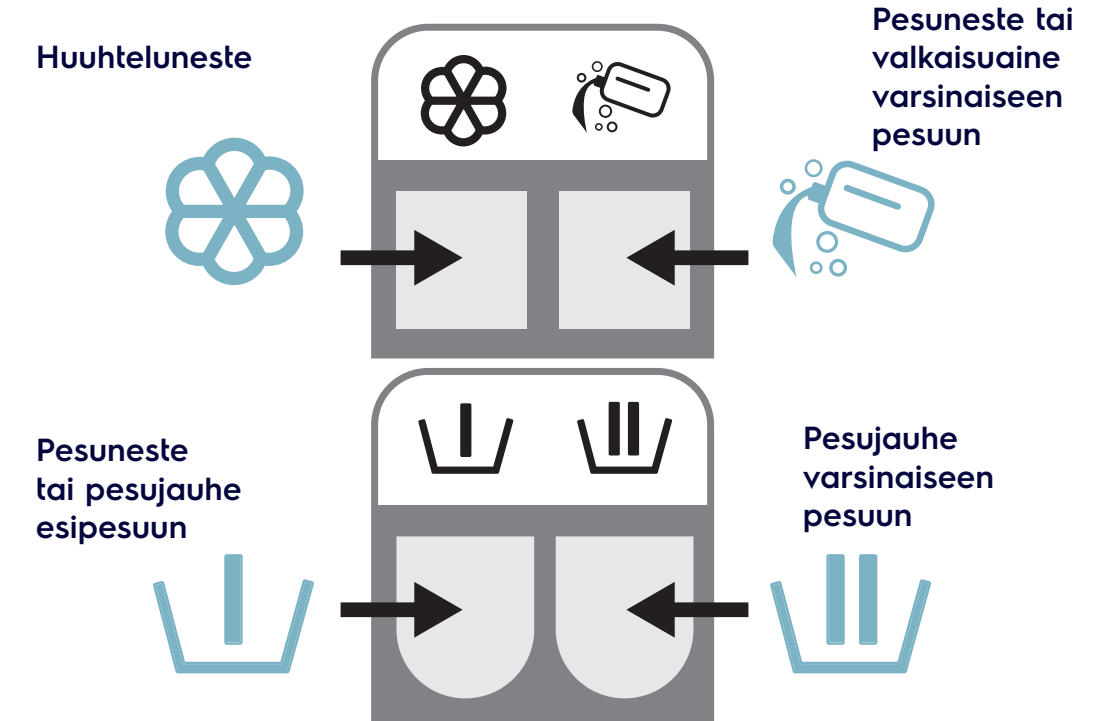

### Lisävalinnat



**Ekologinen**  
pienempi veden ja energian kulutus, ekologinen pesu normaaliliikaisille vaatteille



**Erittäin liikainen pyykki**  
pitkä pesuaika erittäin likaisille tekstiileille




**Pikapesu**  
Lyhyt pesuaika vähän likaisille tekstiileille



**Esipesu**  
ohjelmaan lisätään esipesu




**Ekstra huuhtelu**  
ohjelmaan lisätään huuhtelu

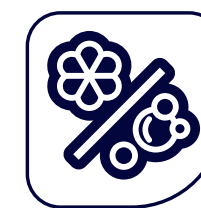

**1 painallus**  
ei huuhtelua  
**2 painallusta**  
ei pesu- ja huuhtelua automaattista annostelua

## 3 Paina sitten valitsinta

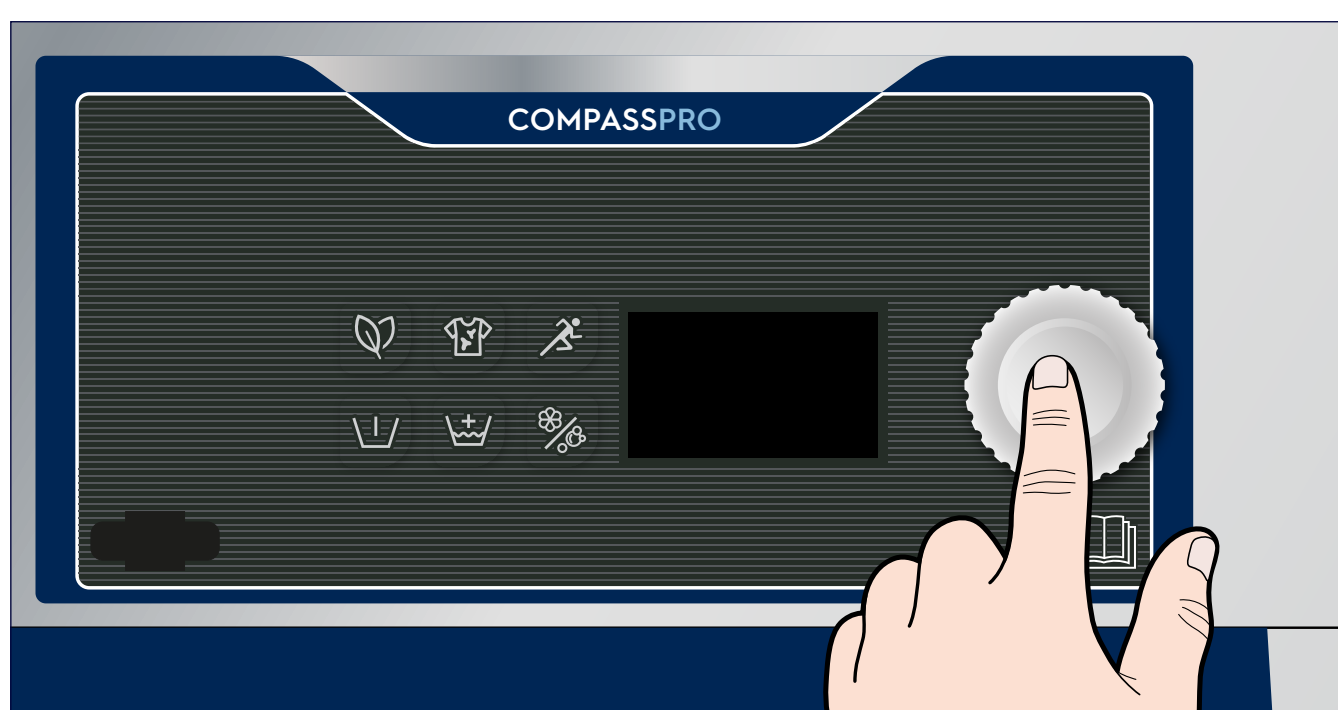

### Pyykkimäärän punnitus alkaa...

Käynnistyksen jälkeen kone punnitsee pyykin linkouksen avulla. Tämän jälkeen pesuprosessi mukautetaan automaattisesti pyykkimäärään. Kone ottaa juuri oikean vesimäärän saavuttaakseen parhaan mahdollisen pesutuloksen.

### Kun teksti "HUOLTO" lukee näytöllä


Tiedota asiasta huoltovastaavalle. Koneita voidaan edelleen käyttää.

### Jos haluat pysäyttää ohjelman

Paina valitsinta. Näytölle ilmestyy valikko, jossa TAUKO on korostettuna. Paina valitsinta uudelleen, jolloin pesuohjelma pysähtyy. Luukku voidaan avata hetken kuluttua, ellei veden taso ole liian korkealla. Pesuohjelma jatkuu, kun suljet luukun ja painat valitsinta.

### Kun pesuohjelma on päättynyt:

Jätä luukku auki. Puhdista pesuainelokero, jätä pesuainelokeron kansi auki.

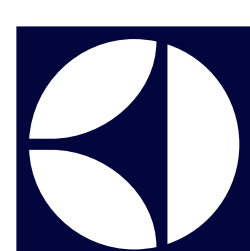


**Electrolux**  
PROFESSIONAL

# Washer instructions




**Multi-Housing Laundry**

## 1 Turn the knob to select a program

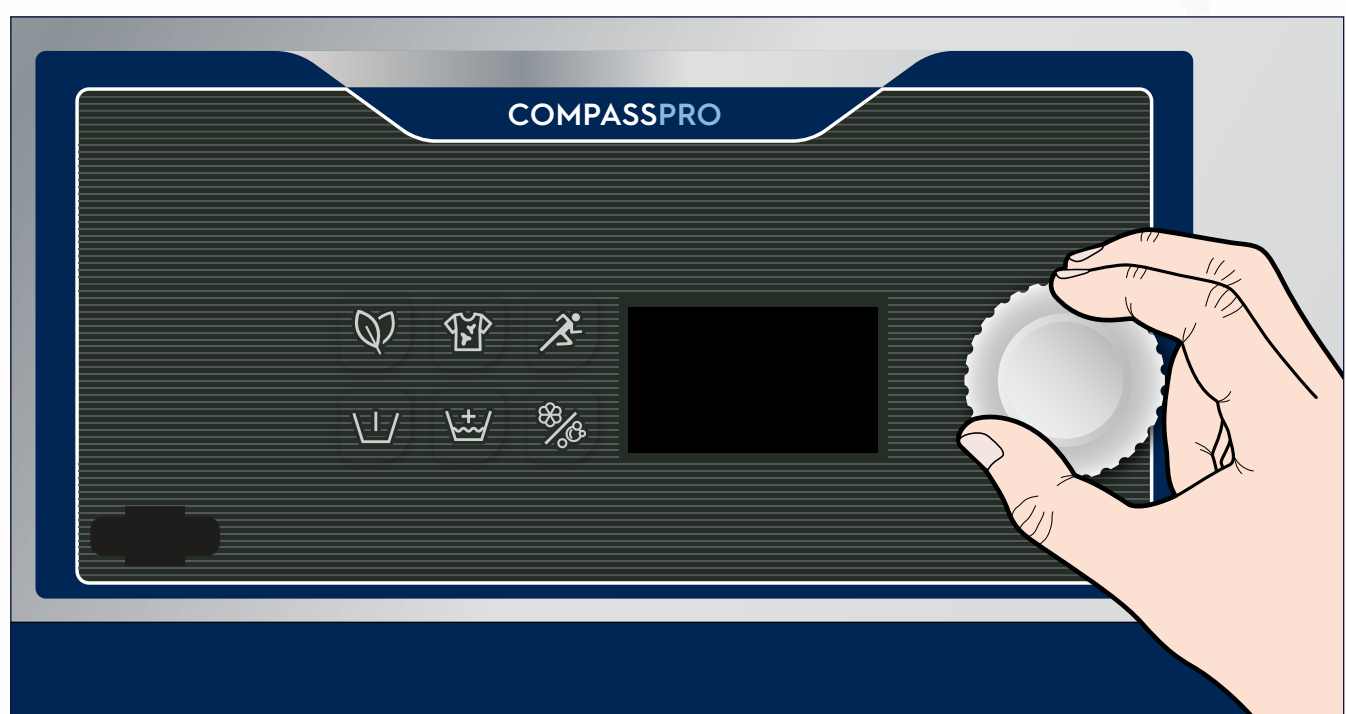

### Wash program

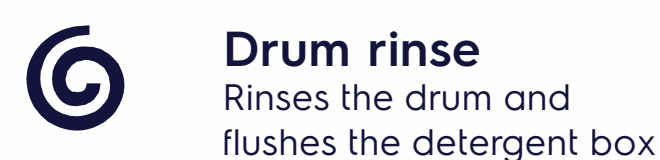

### Normal


whites and coloureds / normal wash / normal cycle / long spin (shorter drying time)

### Mild

Delicates cycle Short spin


For these programs, the machine should be only half full

## 2 Select an option as needed

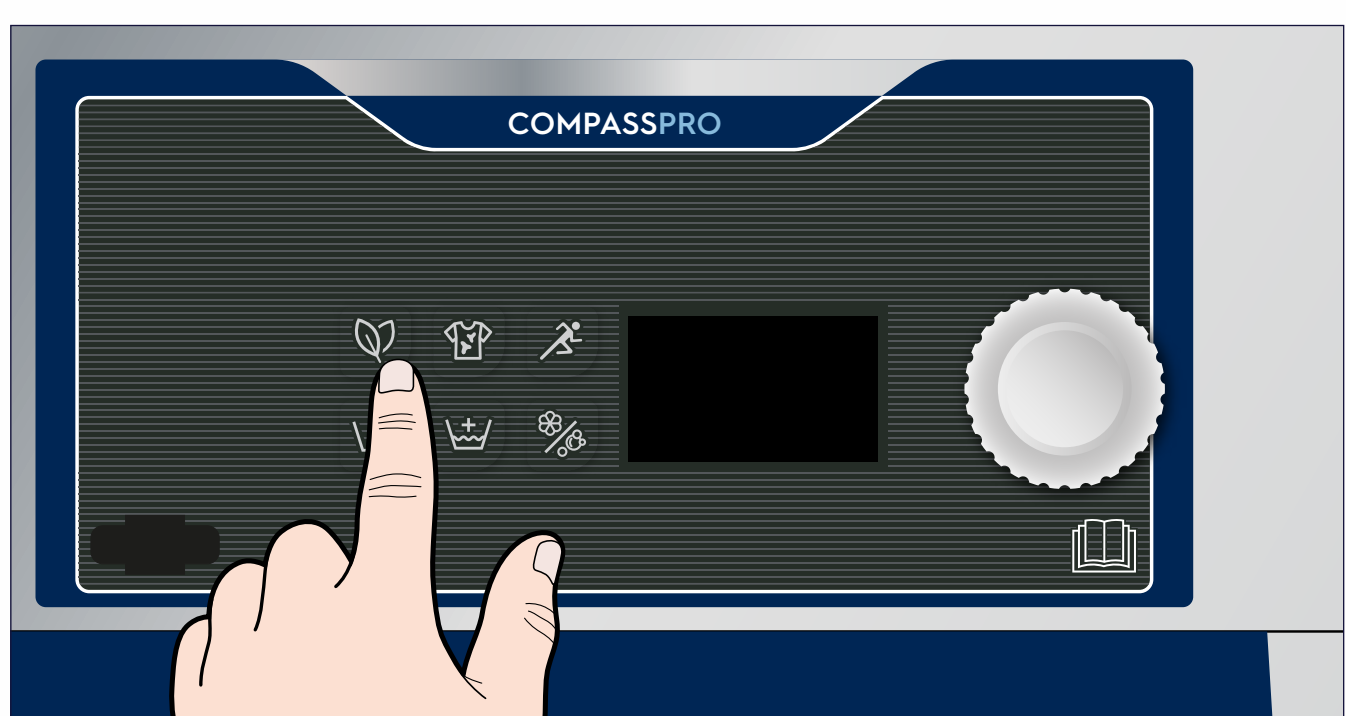

### Dosage

Dispense the detergent according to the instructions on the detergent package

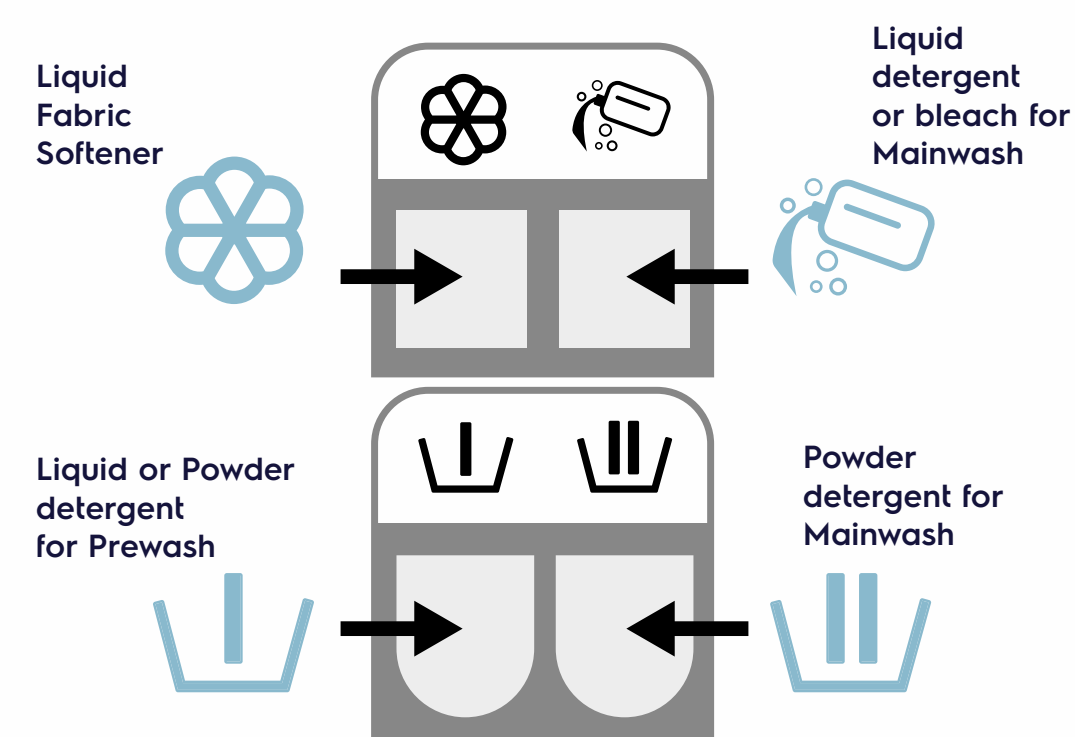

### Options



**Eco**  
for normally soiled clothes, environmentally friendly wash



**Heavy soil**  
for heavily soiled textiles, long wash time



**Quick wash**  
for lightly soiled textiles, short wash time



**Prewash**  
one prewash added




**Extra rinse**  
one rinse added



**Press once**  
no softener  
**Press twice**  
no automatic dispensing of detergent or softener

## 3 Press the knob to start

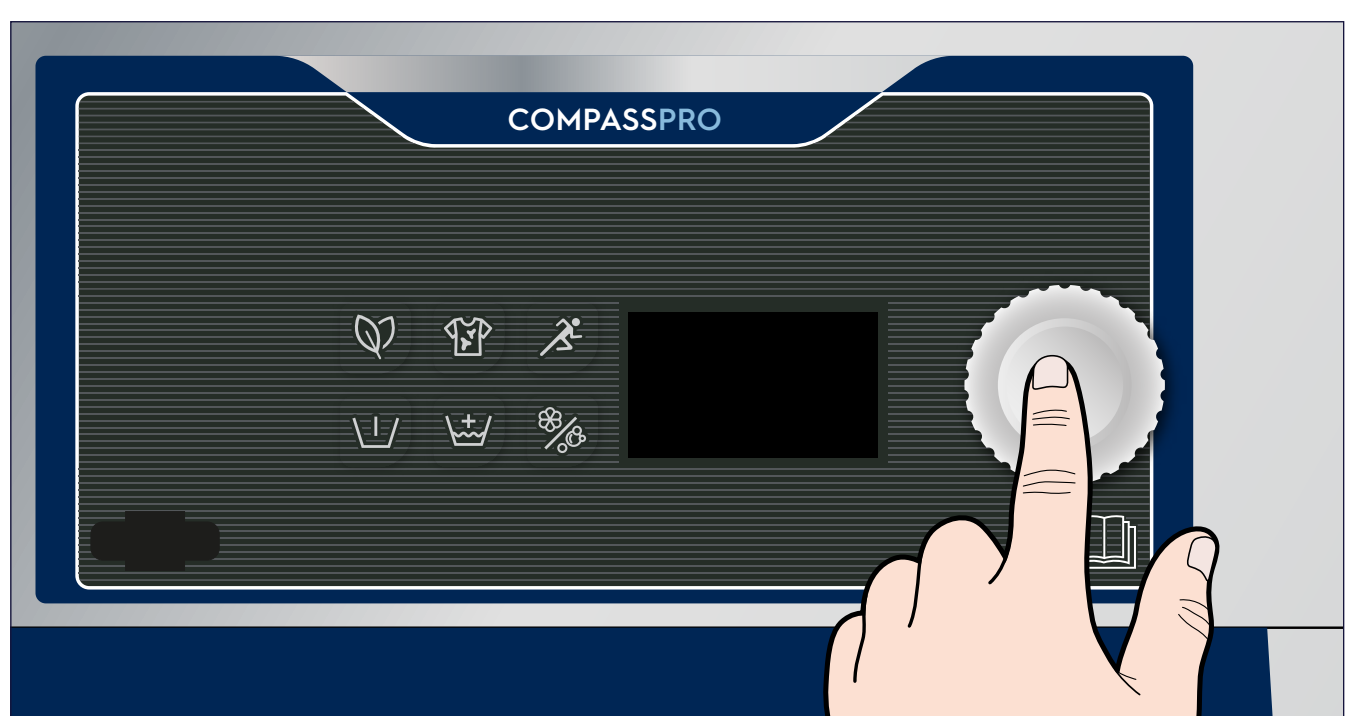

### Weighing of the wash load starts

Once started, the machine analyses the wash load using the spin function. The washing process is then automatically adjusted to the weight of the wash load.

### When "maintenance" is displayed

Inform the person in charge of maintenance. The machine can still be used.

### If you need to pause the program

Press the knob. A menu with pause highlighted will be shown on the display. Press again to pause the wash program. The door can be opened after a while unless the water level is too high. Close the door and press the knob to continue the wash program.

### Once you have finished washing

Leave the door open. Clean the detergent compartment, leave the cover of the detergent box open.