


Käyttöohje (1710031) Pesukoneet TALPET IY 65 ja 80

Yleistä

Koneen käyttöpaneelissa on näyttö, joka näyttää pesuohjelman lämpötilan, jäljellä olevan pesuajan ja käynnissä olevan pesuohjelman nimen ja numeron sekä mahdolliset vikailmoitukset. Koneen käyttöpainikkeet on sijoitettu näytön alle ja vasemmalle puolelle. Näytön yläreunan nuoli osoittaa käynnissä olevan pesuohjelman vaiheen.

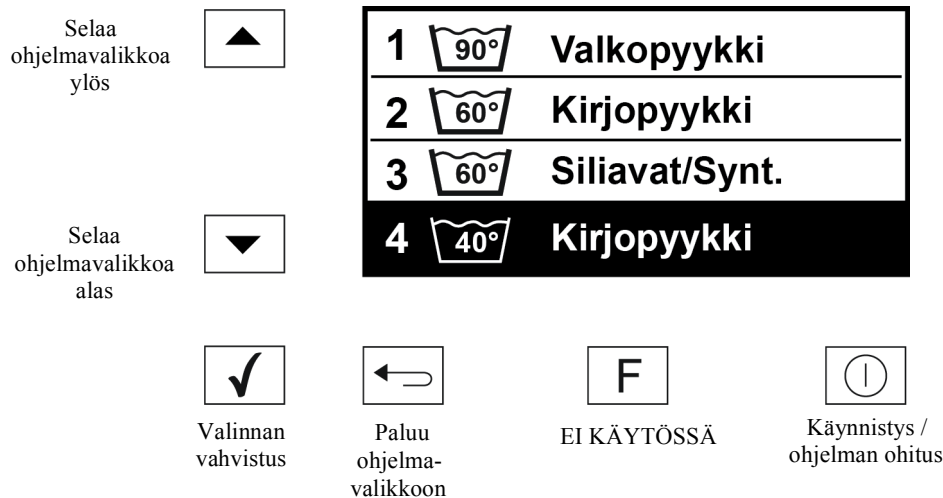

Käyttöpaneelin vasemmalla puolella on keltaisella renkaalla merkitty punainen HÄTÄSEIS-painike, jonka painaminen sammuttaa koneen. HÄTÄSEIS-painike on tarkoitettu käytettäväksi ainoastaan vaaratilanteissa, eikä sitä tarvita koneen normaalissa käytössä. HÄTÄSEIS-painikkeen painamisen jälkeen konetta voidaan käyttää vasta, kun painike on vapautettu kiertämällä punaista nuppia nuolten osoittamalla tavalla myötapäivään.

Koneen täyttöluukku avataan kiertämällä kahvaa myötapäivään ja sen jälkeen vedetään luukku kevyesti. Luukku suljetaan painamalla luukku kiinni rauhallisesti ja kiertämällä kahvaa vastapäivään.

Pesuainelokerikko on sijoitettu pesukoneen päälिकanteen.

Konetta ei saa pestä juoksevalla vedellä.

MATTOJEN JA VASTAAVIEN PESU ON KIELLETTY!



Valmistelevat toimet



Tarkista, että vesisulut ovat auki. Vesisulut tulee pitää suljettuina, kun konetta ei käytetä.

Tarkista, että virta on kytkettynä seinällä olevasta turvakytkimestä. Kytkin tulee pitää aina päällä eli ON- tai I-asennossa. Mikäli virta on kytkettynä seinällä olevasta turvakytkimestä, mutta koneen näyttö on pimeänä, tarkista ettei HÄTÄSEIS-painiketta ole painettu ja jätetty vapauttamatta (ks. kohta Yleistä). Pesukonetta voi käyttää, kun näytössä näkyy ohjelmavalikko.

Lajittele pyykki pesumerkkien mukaan ja tarkista, että taskut ovat tyhjä. Vieraiden esineiden joutuminen pesurumpuun voi vaurioittaa konetta. IY 65 -koneessa voi kerralla pestä enintään 6,5 kg kuivaa pyykkiä ja IY 80 -koneessa enintään 8 kg kuivaa pyykkiä. Hienopyykkiä pestäessä täyttömääräksi suositellaan enintään puolta koneen kapasiteetista.

Laita pyykki koneeseen kuohkeasti ja sulje täyttöluukku rauhallisesti.

Mikäli kone on kytketty rahastinlaitteeseen, tutustu myös sen käyttöohjeeseen. Pesuohjelman myyvää rahastinta käytettäessä koneen näytössä näkyy ”Suorita Maksu”, kunnes maksu on suoritettu rahastimeen.

Etsi ohjelmavalikosta haluamasi ohjelma -painikkeilla selaamalla ja valitse ohjelma -painikkeella.

Näyttö näyttää ohjelman tiedot, ohjeet pesuaineen annostelusta pesuainelokerikkoon (kuva 1) ja ohjelman käynnistämistä (kuva 2).



Kuva 1.







Kuva 2.



Pesu- ja huuhteluaineen annostelu

Annostelee pesu- ja huuhteluaineet pesuainelokerikkoon alla olevien kuvien mukaisesti. Esipesua varten annostelee pesupulveri pesuainelokeroon I tai jos käytät nestemäistä pesuainetta, suoraan rumpuun käyttämällä pesupalloa. Pääpesua varten annostelee pesupulveri lokeroon II tai vaihtoehtoisesti nestemäinen pesuaine lokeroon III. Annostelee huuhteluaine viimeiseen, oikeanpuoleisimpaan lokeroon. Noudata aina aineiden valmistajien annosteluohjeita.



-  : pesupulveri esipesuun
-  : pesupulveri pääpesuun
-  : nestemäinen pesuaine pääpesuun
-  : huuhteluaine

Koneen käynnistäminen


Käynnistä ohjelma painamalla -painiketta. Jos käynnistät väärän ohjelman, voit vaihtaa ohjelmavalintaa -painikkeilla ensimmäisen vaiheen aikana.

Ohjelman etenemistä voit seurata näytön yläreunan nuolesta (kuva 3).



Kuva 3.

Ohjelman vaiheiden ohittaminen

Pesurohjelman vaiheita voi tarvittaessa ohittaa painamalla ohjelmanohitus -painiketta ja toimintoa voi seurata ohjelman eri vaiheiden merkkivaloista.

Käytön jälkeen

Ohjelman päätyttyä näyttöön tulee teksti ”TYHJENNÄ”, jolloin täyttöluukku voidaan avata. Jätä täyttöluukku auki ja kone siistiin kuntoon seuraavalle käyttäjälle.

Turvallisuusohjeita ja varoituksia

- Konetta ei saa pestä juoksevalla vedellä tai peittää.
- Älä päästä lapsia pesukoneen lähelle konetta käytettäessä, äläkä jätä lapsia ilman valvontaa pesutiloihin.
- Pyykkiä pestäessä käytä vain konepesuainetta.
- Konetta ei saa käyttää kemialliseen pesuun.
- Pesukone on tarkoitettu vain tekstiilien pesuun.
- Tekstiilit, jotka otetaan koneesta ohjelman keskeytyksen jälkeen voivat olla kuumia.
- Pidä pesukone ja sen ympäristö puhtaana. Älä säilytä helposti syttyviä materiaaleja koneen läheisyydessä.
- Tulipalon sattuessa pesukoneen voi sammuttaa sähkölaitteiden sammuttamiseen soveltuvalla sammuttimella.
- Vaaratilanteessa kytke päävirtakytkimestä virta pois.
- Pesukoneen luukku ei voi aukaista, jos rummussa on vettä tai lämpötila on liian korkea. Odota veden poistumista ja viilentymistä ennen toimenpiteitä palovamman riskin vuoksi.
- Sähköturvallisuusmääräysten mukaan sähkölaitteen saa asentaa, huoltaa ja korjata ainoastaan sähköalan töihin pätevä ammattihenkilö.
- Älä käytä pesukonetta, jos koneen osia on rikkoontunut, poistettu tai suojakannet ovat auki.
- Havaituista vioista on heti ilmoitettava kiinteistöhuoltoon tai isännöitsijälle ja pesukoneen käyttö on lopetettava.
- Ennen täyttöluukun avaamista varmista, että rumpu on täysin pysähtynyt ja tyhjentynyt vedestä.
- Pesuainelokerikon kantta ei saa avata koneen ollessa käynnissä.




Talpet - täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi

Operating instructions (2010001) Washing machines **TALPET IY 65 and 80**

General

The display on the washing machine operating panel indicates the temperature, the remaining wash time, the current program name and number, and any possible error messages. The machine operating buttons are placed below and on the left hand side of the display. The arrow on the upper part of the display indicates the current program stage.

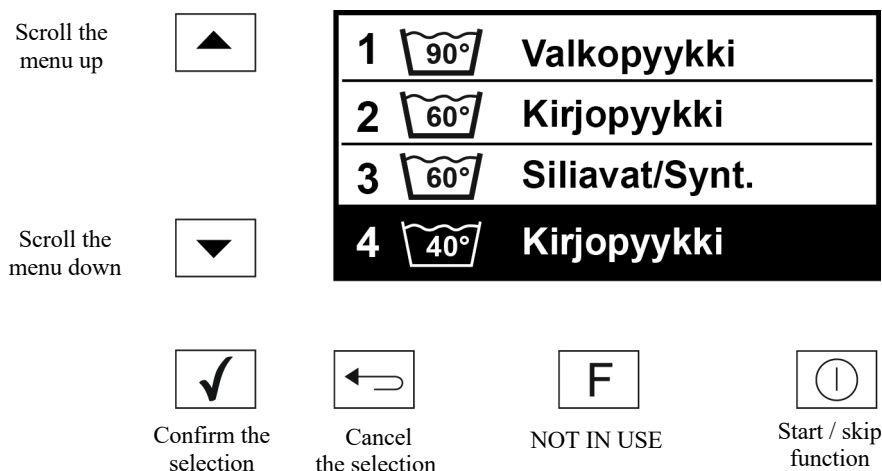

The left side of the control panel has a red EMERGENCY STOP button that is marked with a yellow circle. This will shut off the machine. The EMERGENCY STOP button is to be used only in case of danger, and it is not needed in regular use. After the EMERGENCY STOP button has been pressed, the machine can be started only after the button is released by turning the red knob clockwise, as indicated by the arrows.

To open the machine door, turn the handle clockwise and pull lightly. To close the door, push lightly and turn the handle counter-clockwise.

The detergent compartment is placed on the top part of the machine.

Do not clean the machine under running water.

DO NOT WASH CARPETS OR SIMILAR ITEMS IN THIS MACHINE!



Before using the machine



Check that the water inlet valves are open. Keep the valves closed when the machine is not in use.

Check that the power is switched on from the safety switch on the wall. The switch must always be turned on, in the ON or I position. If power is switched on from the safety switch but the machine display is off, make sure that the EMERGENCY STOP button has not been pressed and left unreleased (see “General”). The washing machine can be used when the display shows the program menu.

Sort your laundry according to the care labels and empty all pockets. Foreign objects in the washer drum can cause damage to the machine. The maximum capacity for the IY 65 machine is 6,5 kg and for the IY 80 machine 8 kg; this is the amount of dry items that can be washed at a time. With delicate items the recommended maximum load is half of the machine capacity.

Place the garments lightly in the drum and carefully close the door.

If the washer is connected to a vending unit, read also its instructions. When a wash program vending machine is in use, the washing machine display shows “Suorita Maksu” until a payment has been made.

Search the desired program from the menu with the  buttons and select it with the  button.

The display shows program information and instructions for dosing the detergent into the detergent compartment (image 1) and starting the program (image 2).



Image 1.







Image 2.

Dosing the detergent and fabric softener


Dose the detergent and fabric softener into the detergent compartments as indicated in the images below. For pre-wash, put the powder detergent in the compartment I, or if you are using liquid detergent, in a washing ball directly inside the washer drum. For the regular wash, put the powder detergent in compartment II, or liquid detergent in compartment III. Dose the fabric softener in the last, rightmost compartment. Always follow the detergent manufacturer's dosing instructions.



-  : detergent for pre-wash
-  : detergent for regular wash
-  : liquid detergent for regular wash
-  : fabric softener

Starting the machine

Start the machine by pressing the  button.


During the first stage of the program, the program can still be changed by pressing the  button.

Proceeding of the program can be followed from the pile located at the upper part of the display (image 3).



Image 3.

Skipping program stages

If required, wash program cycles can be skipped by pressing the  button and tracking the function on the program stage indicators.

After using the washer

After the completion of the wash cycle, the display shows the message "TYHJENNÄ" and the door can be opened. Leave the washer door open and clean the machine for the next user.

Safety instructions and warnings

- Do not cover the machine, and do not clean it with running water.
- Always keep children well away from the appliance while it is operating, and do not let children unattended in the laundry.
- Only use detergents intended for washing machines.
- Do not use the washing machine for dry-cleaning.
- The machine is designed for washing textiles only.
- After cancelling a program, the textiles removed from the machine may be hot.
- Keep the washing machine and the area around it clean. Keep highly flammable materials away from the machine.
- In case of a fire, the machine can be extinguished with a fire extinguisher that is suitable for electrical fires.
- In case of danger, switch off the power from the main power switch.
- The door of the washing machine cannot be opened if there is water in the drum or if the temperature is too high. To avoid burns, wait for the water to drain and the contents to cool down.
- According to electrical safety regulations, installation, maintenance and repairs should only be undertaken by approved service technicians.
- Never use the machine with broken or removed parts, or with safety lids open.
- If you observe defects or malfunctions, stop using the machine immediately and inform the property maintenance company or the property manager.
- Before opening the machine door, make sure that the drum is completely stationary and drained of water.
- Do not open the detergent compartment lid while the machine is in operation.



Talpet

- täydellinen kiinteistöpesulakoneohjelma

TALOPESULAT OY Vitikka 1 C, 02630 ESPOO puh. (09) 6869 750, fax (09) 6869 7520, info@talpet.fi, www.talpet.fi